




GAMING MOUSE

Thank you for choosing this gaming mouse, please read the user manual carefully when you use this product.

Contents:

Mouse ----- x 1
User Manual ----- x 1
CD Driver (Optional) ----- x 1

Button Function:

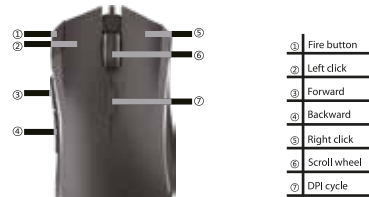

Note:

By pressing 3 buttons (Left click, Scroll wheel, Right click) at the same time for about 5 seconds, the light mode can be adjusted. It is showed as: Floating RGB mode, All off, Full-lighted, Breathing.

- Floating RGB mode: The light color is floating (except scroll wheel)
- All off mode: All light will be off, but the scroll wheel light cannot be off.
- Full-lighted mode: Only one light color for whole mouse, you can change the color by DPI shift (pressing DPI button).
- Breathing mode: 5 gear light color will change automatically (except the scroll wheel).

*** For any mode, the light of scroll wheel will not be Off, it will keep the current color. Only by pressing DPI button you can change the color.

1.

Mouse Usage

Connect the mouse with your computer by USB port, it can work normally after detecting finished. If needed, you can set the button functions as followings.

Different Solution Option

Solution	A3050	PMW3325	PMW3310
DPI	5 gear DPI shift, top to 4000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)
Acceleration	20G	20G	30G
Polling rate	125Hz~1000Hz	125Hz~1000Hz	125Hz~1000Hz
Working voltage	5V	5V	5V
Working current	≤150mA	≤150mA	≤150mA
Cable length	1.8M	1.8M	1.8M

Driver Installation

Install the driver from the CD in the package, or you can download it from:

<http://www.deluxworld.com>

This mouse has different solution for choosing, please pay attention to the mouse you bought (It is showed on the rating label), and when install the driver to choose correct solution (A3050 or PMW3310 or PMW3325).

2.

GAMING MOUSE



Tip:
Please make sure the mouse has already been connected to our computer when installing the driver.

Driver Setting Instruction

After installation ok, get into the setting interface, you can start to set up the mouse function.



A. Button Setting (Custom)

Choose one button you want to set, 11 functions can be set for the chosen button.



3.

B. Performance:

By adjusting the coordinate, you can set the Sensitivity (DPI), Pointer Speed and Polling Rate.

Tip:
DPI value and the parameters of polling rate will be different because of different solution for mouse, please in kind prevail.



C. Light Setting:

You can set different light mode: Floating RGB Mode, All off, Full-lighted, Breathing. And you can set the related parameters.



4.

Macro:

Choose a Macro or create a new one, click OK and Apply it.

Assign a Macro:

- 1) Open Macro on the main interface
- 2) Choose a existed macro to modify it, or open a new one and name it.
- 3) Click "Record" to start the recording and finish the macro edit.
- 4) You can set the default delay or no delay by choosing Record delay.



Environment and Usage

The optical mouse is suitable for a variety of colors and materials planes, such as wood, paper, cloth, etc. but not suitable for the smooth glass or mirror. If encounter this kind of situation, it is recommended that you use the mouse pad. (For the mouse with PMW3310 solution, in order to use it better, please work it on the mouse pad).

5.

DELUX



M625

Геймърска мишка

Ръководство на потребителя

Благодарим Ви, че избрахте геймърската мишка. Моля, прочетете внимателно това ръководство.

► Съдържание на пакета:

- 1x Мишка
- 1x Ръководство на потребителя

► Функции на бутоните:



- | | |
|---|-------------|
| ① | Fire button |
| ② | Ляв бутон |
| ③ | Напред |
| ④ | Назад |
| ⑤ | Десен бутон |
| ⑥ | Скролер |
| ⑦ | DPI |

1.

► Забележки:

С едновременно натискане на бутони ляв, десен, скролер, за 5 сек. се променя режимът на подсветка. Изберете измежду режими: плаващ RGB, изключени, дишащо, напълно осветен. За всеки един режим скролерът няма да се изключи. Единствено с натискане на DPI бутон е възможна смяна на цвета.

► Използване на мишката:

Свържете мишката с USB порт на компютър и изчакайте да се инсталира автоматично драйвърът. Ако желаете може да зададете следните функции:

Solution	A3050	PMW3325	PMW3310
DPI	5 gear DPI shift, top to 4000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)
Acceleration	20G	20G	30G
Polling rate	125Hz~1000Hz	125Hz~1000Hz	125Hz~1000Hz
Working voltage	5V	5V	5V
Working current	≤150mA	≤150mA	≤150mA
Cable length	1.8M	1.8M	1.8M

2.

Геймърска мишка



Ръководство на потребителя

► Инсталиране на драйвър

Свалете драйвера от сайта: www.deluxworld.com.

Мишката има различни сензори.

Моля, обърнете внимание на мишката, която сте закупили и когато инсталирате драйвера, за да изберете правилния сензор: A3050; PMW3310; PMW3325.

Съвет:

Уверете се, че мишката е свързана към PC, когато инсталирате драйвера.

► Настройване на драйвера:

След инсталиране на драйвера, преминете към интерфейса за настройване за конфигуриране на функциите.



3.

Персонализирани настройки на бутоните

Изберете бутонът, който ще конфигурирате и настройте измежду 11 възможни функции.



Производителност

Настройте чувствителността DPI, скорост на показалеца и Polling Rate.

Съвет:

Стойностите на DPI и Polling Rate са различни за различните модели на сензорите.

4.



Настройки на подсветката

Възможни са различни светлинни режими: изключено, дишащо, пълна светлина и да зададете желаните параметри.



4.

Macro:

Изберете таб „Macro“ и създайте нов, след което натиснете ОК за потвърждение.

1. Отворете „Macro“ от главния интерфейс.
2. Изберете съществуващ макро, за да го промените или създайте нов.
3. Натиснете „Record“ за начало на микро. За край - финализирайте процеса.
4. Може да зададете операция по подразбиране или да изберете Record delay.



Околна среда и употреба
Оптичната мишка е подходяща за различни цветове и плоскости от материали, като дърво, хартия, плат, но не е подходяща за стъкло или огледало.