



## Wireless USB Adapter

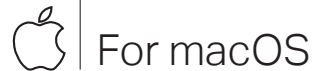


### 1 Connect to a Computer

Option 1: Directly

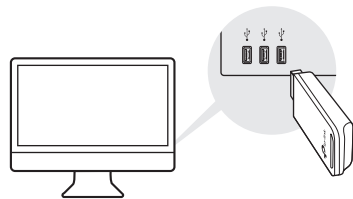

Option 2: Via the USB Extension Cable  
(If provided)

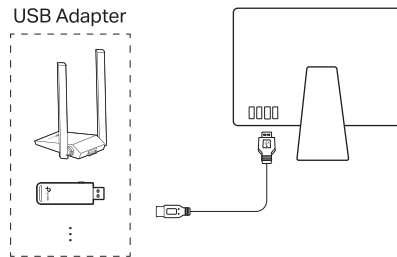


### 2 Install Driver and Utility

a. Download the driver and utility at <https://www.tp-link.com/download-center>

Note:  
If your computer has a CD drive, you can also run the included CD to install the driver and utility.

b. Unzip the downloaded folder and run the **Install.pkg**.

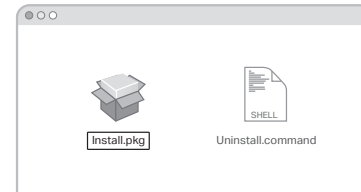


c. Follow the instructions to complete the installation.

### 3 Join a Wireless Network

Option 1: Via TP-Link Utility

a. Click  (TP-Link Utility) on the menu bar.



b. Select your Wi-Fi network and enter the Wi-Fi password when prompted.

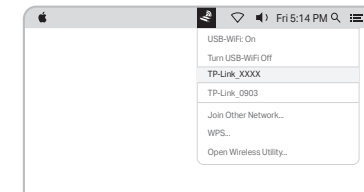

Option 2: Via Wi-Fi Protected Setup (WPS)  
(If your adapter has a WPS button)

a. Press the WPS button on your router.


b. Within 2 minutes, press and hold the WPS button on the adapter until the WPS progress window appears.

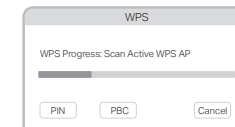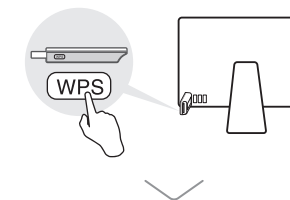




# 1 Connect to a Computer

Option 1: Directly

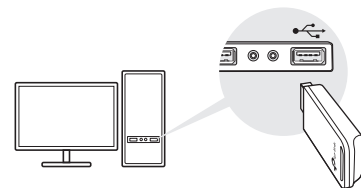

Option 2: Via the USB Extension Cable (if provided)

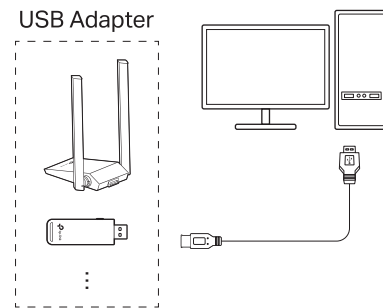

# 2 Install Driver

a. Insert the CD and run the **Autorun.exe**.

Note:  
You can also download the driver or check the new release at <https://www.tp-link.com/download-center>

b. Select **your adapter** and follow the instructions to complete the installation.


Notes:  
• If you can't install the driver successfully, disable the antivirus software and firewall, then try again.  
• In Windows 7, if a Windows Security message pops up, refer to **Troubleshooting > T4**.

# 3 Join a Wireless Network

Option 1: Via Windows Wireless Utility


a. Click the network icon ( or ) on the taskbar.

b. Select your Wi-Fi network, click **Connect** and enter the password when prompted.

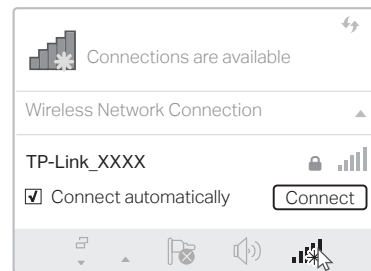

Option 2: Via WPS Tool (If your adapter has a WPS button)

a. Press the WPS button on your router.  
b. Within 2 minutes, press and hold the WPS button on the adapter until WPS Tool opens.

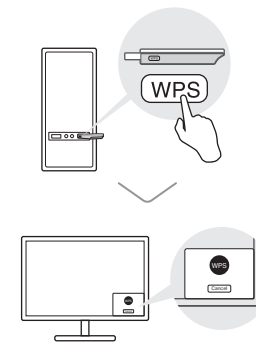

# Troubleshooting



If you have problems during the installation, please refer to the following online FAQs.

T1. Can't find the hardware version of the adapter: <https://www.tp-link.com/faq-46.html>

T2. Can't find or connect to the wireless networks: <https://www.tp-link.com/faq-2253.html>

T3. Can't install the driver: <https://www.tp-link.com/faq-2252.html>

T4. How to fix Windows 7 Security issue: <https://www.tp-link.com/faq-2760.html>

# Support

For technical support, replacement services, user guides, and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- Keep the device away from water, fire, humidity or hot environments.
- This USB Adapter can only be powered by computers that comply with Limited Power Source (LPS).