


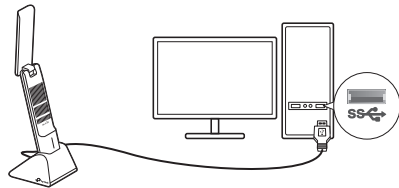
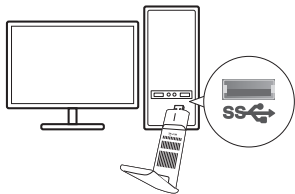
1 Connect to a Computer

Note: It is recommended to connect the adapter to a USB 3.0 () port.

Option 1: Directly

Option 2: Via the USB Extension Cable

Wireless USB Adapter



Images are for demonstration only.

2 Install Driver


- Go to **My Computer** or **This PC**.
- Double click the **TP-Link** CD-ROM then run **SetupInstall.exe** to install driver.




Notes:

- If you cannot find the setup program, please download the driver at www.tp-link.com/support.
- If an unknown publisher message pops up, select **Yes** to continue.
- If Windows User Account Control requires admin credentials, type user name and password of your Windows administrator account.

3 Join a Wireless Network

- Click the network icon  on the taskbar.
- Select your Wi-Fi network, click **Connect** and enter the password when prompted.

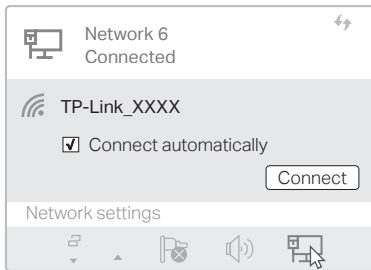

Troubleshooting



If you have problems during the installation, please refer to the following online FAQs.

- Can't find the hardware version of the adapter:**
<https://www.tp-link.com/faq-46.html>
- Can't find or connect to the wireless networks:**
<https://www.tp-link.com/faq-2253.html>
- Can't install the driver:**
<https://www.tp-link.com/faq-2252.html>

Support

For technical support, replacement services, user guides, and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



Safety Information

- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- Keep the device away from water, fire, humidity or hot environments.
- This product can be powered only by power supplies that comply with Power Source Class 2 (PS2) or Limited Power Source(LPS) of IEC 62368-1.