

Installation Guide

 
Omada Pro Gigabit Smart Switch

LED Explanation

LED	Status	Explanation
Power	On	Power on
	Off	Power off
System	Flashing	Flashing: System running normally
	On/off	On/Off: System running abnormally
Link/Act (port 1-8)	On (Green)	Running at 1000 Mbps
	On (Yellow)	Running at 10/100 Mbps
	Flashing	Transmitting/receiving data
	Off	No connected device
SPF1/SFP2 (For S4500-8GP2F)	On (Green)	Running at 1000 Mbps
	On (Yellow)	Running at 100 Mbps
	Flashing	Transmitting/receiving data
PoE Status (For Port 1-4 of S4500-8GP/Port 1-8 of S4500-8GP2F)	On	Providing PoE power
	Flashing	Current-overload/Short-circuit/Connected to a non-standard PD/Power exceeded the user-defined value
	Off	Not providing PoE Power
PoE MAX (For S4500-8GP/S4500-8GP2F)	On	Remaining power supply \leq 7W
	Flashing	Remaining power supply keeps \leq 7 W for more than 2 minutes
	Off	Remaining power supply $>$ 7W

Desktop Installation

For simplicity, we will take S4500-8G for example.

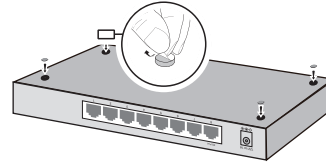


1. Remove the adhesive backing papers from the feet.
2. Attach the rubber feet to the bottom of the switch to prevent it from slipping when placed on a desktop.

Note: This device also supports wall-mounting installation. For detailed information, please refer to the Wall Mounting Guide on the device's support page.

Connection for PoE Switch

 For simplicity, we will take S4500-8GP2F for example.

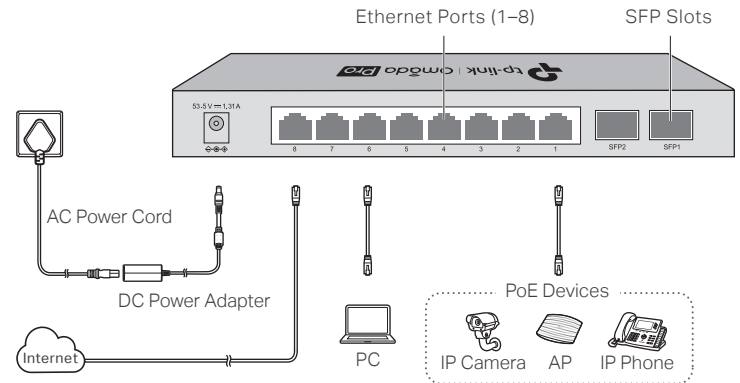


Note:

1. PoE ports can also connect to non-PoE devices, but only transmit data.
2. Maximum PoE power is 30 W for each PoE port, and 62 W (for S4500-8GP)/61 W (for S4500-8GP2F) for all PoE ports.
3. PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.

Connection for Non-PoE Switch

 For simplicity, we will take S4500-8G for example.

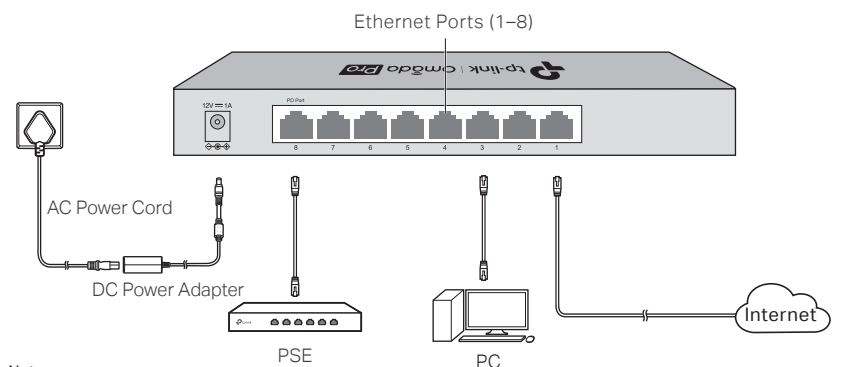

Note:

1. Port 8 is a PD (Powered Device) port that supports being powered by a PSE (Power Sourcing Equipment) which complies with LPS or PS2 standard and 802.3af/at standard.
2. The DC power input takes precedence over the PD port. If the DC input fails, the PoE input on the PD port will supply power instead.

Configuration


The switch supports two configuration methods:

- Standalone Mode: Configure and manage the switch singly.
- Controller Mode: Configure and manage the network devices centrally. It is recommended in the large-scale network, which consists of mass devices such as access points, switches, and gateways.

Note: When the switch is changed from Standalone Mode to Controller Mode, configurations of the switch will be lost. For details, refer to the related documents on the download center of our official website: <https://www.tp-link.com/support/download/?type=smb>.

Method 1: Standalone Mode

 In Standalone Mode, use a computer to configure and manage the switch.

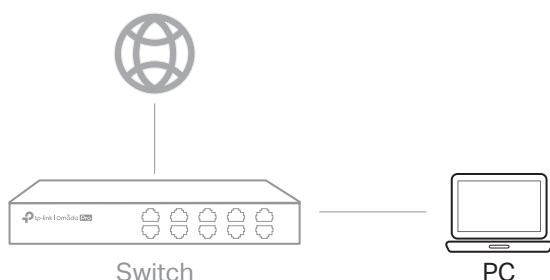

1. To access the management page of the switch, open a browser and type the switch's IP address in the address field, then press the **Enter** key.
 - If the switch obtains IP address from the DHCP server (typically a router), find the switch's IP address on the DHCP server.
 - If not, use the default IP address **192.168.0.1** to launch the switch's management page.

Note: Make sure the switch and computer are in the same subnet.

2. Enter **admin** for both the username and password in the lower case letters to log in. The first time you log in, change the password to better protect your network and devices.
3. After a successful login, the main page will appear. You can click the menus on the top side and left side to configure the corresponding functions.


For the detailed configurations, refer to the User Guide and CLI Guide. The guides can be found on the download center of our official website: <https://www.tp-link.com/support/download/>.

Option 2: Controller Mode Choose a type of controller:

Type 1: Omada Pro Software Controller

If you want to use the software controller, get a PC with Windows or Linux OS, contact the sales staff to get the installation package of Omada Pro Software Controller, then install and launch it.

 To manage your devices, the software controller needs to continually run on your computer. Licenses need to be purchased additionally.

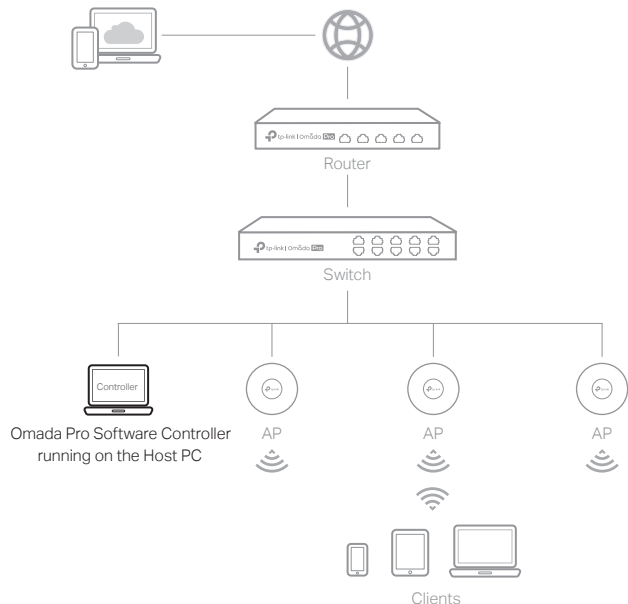

Note: The controller must have network access to your devices in order to find, adopt, and manage them.

Local Management

1. Launch the software controller on your PC. After the initiation process, the controller automatically opens its web page. If not, click **Launch a Browser to Manage the Network**.
2. On the controller's web page, follow the wizard to complete the quick setup.
3. After the quick setup, the login page appears. Enter the username and password you created and click **Log in**. Then you can adopt and manage devices.

Remote Management


Note: Before you start, make sure that both your controller and PC can access the internet.

1. Make sure that **Cloud Access** is enabled on your controller and your controller has been bound with your TP-Link ID.
2. Launch a web browser and enter <https://omada.tplinkcloud.com> in the address bar. Log in with your TP-Link ID. A list of controllers that have been bound with your TP-Link ID will appear. Then you can launch the controller to adopt and manage devices.

Type 2: Omada Pro Cloud-Based Controller

Omada Pro Cloud-Based Controller is a good alternative without the need to install the software controller on a PC.

 Licenses need to be purchased additionally.

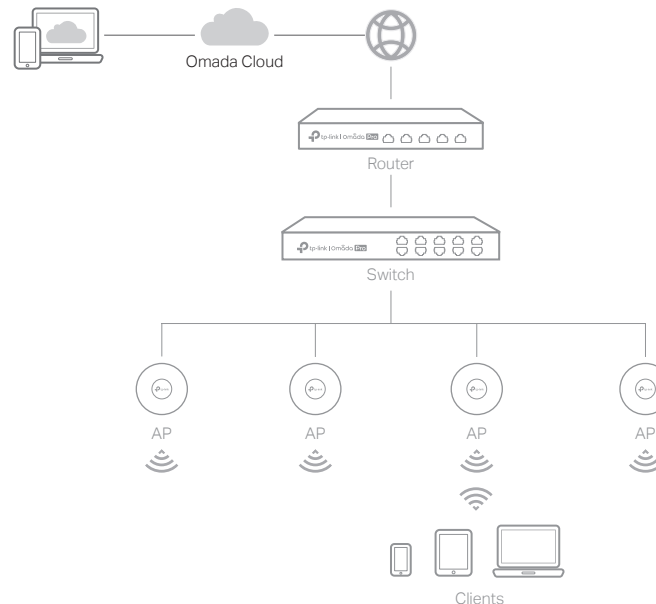

1. Contact the sales staff to grant the Omada Pro Cloud-Based Controller permission.
2. Launch a web browser and enter <https://omada.tplinkcloud.com> in the address bar. Log in with your TP-Link ID.
3. Click **+ Add Controller** and choose **Cloud-Based Controller** to add an Omada Pro controller. Then you can launch the controller to adopt and manage devices.

* Management via Omada App

After configuring a software controller/cloud-based controller via the web, you can use the Omada app to manage your controller.

1. Download and install the TP-Link Omada app from App Store or Google Play.



2. Make sure that **Cloud Access** is enabled on your controller and your controller has been bound with your TP-Link ID.

Note: For the cloud-based controller, skip step 2.

3. Launch the Omada app and log in with your TP-Link ID. Then go to **Cloud Access**. A list of controllers that have been bound with your TP-Link ID will appear. Then you can launch the controller to adopt and manage devices.

EU declaration of conformity

 
TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/support/ce/>

UK declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Electromagnetic Compatibility Regulations 2016 and Electrical Equipment (Safety) Regulations 2016.

The original UK declaration of conformity may be found at <https://www.tp-link.com/support/ukca/>



Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Place the device with its bottom surface downward.
- The plug on the power supply cord is used as the disconnect device, the socket-outlet shall be easily accessible.

To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com/business> to join TP-Link Community.

For technical support and other information, please visit <https://www.tp-link.com/support/?type=smb>, or simply scan the QR code.

