



REDRAGON

INDRAH

Wired Mechanical Gaming Keyboard

Wired Mechanical Gaming Keyboard (Rainbow) Operating Instructions

Dear user

Thank you for choosing REDRAGON brand. To protect your rights and for better customer service, we ask that you note our warranty rules.

- 1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

OS Support

Windows XP/Vista/Win7/Win8/Win10

Product feature

- 1. Computer USB port interfaces with the keyboard without needing to install drivers or software.
2. Multi-level backlight brightness: Press and hold the [FN] key, and then press the arrow key "↑" to increase the backlight brightness of the keyboard.
3. Breathing and rotate speed : Press and hold the [FN] key, and then press the arrow key "←" to slow down.Press and hold the [FN] key, and then press the arrow key "→" keys to speed up.
4. There are 9 selectable backlight modes ,Press and hold the [FN] key, and then press the INS key to switching 9 modes
4.1 ASDW and arrow keys light on
4.2 Scanning from left and right side
4.3 Scanning from 45 degree point
4.4 Snaky running light
4.5 Scanning from left to right
4.6 Spill over light from the touch point
4.7 Normal light on
4.8 Trigger on by touch
4.9 Breathing light
5. FN function key for backlight modes
5.1 FN+1: FPS game mode, ESC,W,A,S,D,"↑","←","↓","→"
5.2 FN+2: CF game mode, A,S,D,W,L-Ctrl,L-Shift,L-Alt,Space,R,G,Q,E,B,1,2,3,4,5,

Tab,F1,F2,F3,Home,End,PgUp,PgDn,PrtSc

5.3 FN+3: COD game mode, Q,W,E,R,T,A,S,D,F,G,C,V,1,2,3,4,5,6,7,L-Ctrl,L-Shift

5.4 FN+4: RTS game mode, Q,W,E,R,A,S,D,G,X,Z,F,K,L,H,M,N,U,Y,T,P,Space,1,2,3,4,5,6,7,8,9,0,L-Ctrl,L-Shift,L-Alt

5.5 FN+5: LOL game mode, Q,W,E,R,D,G,F,B,V,L-Ctrl,L-Alt,Tab,Space,~,1,2,3,4,5,6,Esc

5.6 FN+6: CAR game mode, A,S,D,W,R,"↑","↓","←","→",L-Ctrl, L-Shift, L-Alt

5.7 FN+7: NAB game mode, A,F,S,W,R,E, Space,"↑","↓","←","→",Z,X,C,V,1,2,3,4,L-Shift, L-Ctrl, L-Alt

5.8 FN+8: LOL game mode(Simple), 1,2,3,4,5,6,Q,W,E,R,D,F,B

5.9 FN+9: For end user's define, FN+10: For end user's define

* How to define the LR1(9)and LR2(0)

In the Specified gaming mode, we can define keys to be lit on and assign the mode to LR1 and LR2 by the following steps:

- 1. Change the light mode to specified game mode by FN+INS(M).
2. Press FN+9(LR1), and then FN+Home(LR).In this step you can press FN+0(LR2) to define LR2.
3. Light on the keys as you want to.
4. Press FN+END(S) to save your record.
5. If you want to clear what you have recorded, press FN+PageUp.
6. To disable the [WIN] key: Press and hold the [FN] key, and then press [WIN] key to turn off [WIN] key in order to avoid leaving gaming function if user presses [WIN] key by mistake. Repeat the above operation to restore the function.

Multimedia function: 12 multimedia keys. Access by pressing the [FN] key and one of the [F1]-[F12] keys at the same time.

FN+F1 Open my computer

FN+F2 Search

FN+F3 Open the calculator

FN+F4 Open multi-media player

FN+F5 Previous

FN+F6 Next

FN+F7 Play/ Pause

FN+F8 Stop

FN+F9 Mute

FN+F10 Volume decrease

FN+F11 Volume increase

FN+F12 Lock keyboard, repeat to unlock.

6. Marco recording function

6.1 G keys with Macro function (Factory setting function of G1~G5 as F1~F5)

6.2 Macro recording function:

Step 1: Press FN keys and hold for 5 seconds, then press desired G key(G1-G5)

Step 2: Press keys to be recorded while the three indicators twinkle, the max recording contents is 8 bytes, the recording will be completes when it is over the maximum, three indicators will stop twinkle.

Step 3: Press FN key and hold, then press the desired key to complete the recording.

Delete the recording:

6.2.1 To delete a single recorded macro key: Press [FN] and hold then press the desired macro key(G1~G5), while the three indicators twinkle, press the desired macro key complete the delete.

6.2.2 To delete all macro keys (G1~G5):Press [REC] key and hold for few seconds to delete all macro.

FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



Table with 7 columns: Piece parts, Pb, Hg, Cd, Cr(VI), PBB, PBDE. Rows include Plastic parts, Metal parts, Circuit components, and Cable, each with a corresponding circle icon.

Note: O = indicates the percentage of toxic or harmful substances in the parts

Our products do not contain toxic or harmful substances and environment friendly, it can be recycled

Form for Name of commodity, Customer, and Retailer information, including Name, Address, Tel, and Zip code fields.