

90mm

135mm



K3300
Wireless Keyboard

Thank you for choosing this wireless keyboard and please read the manual carefully before use this combo.

Contents:

K3300D

Wireless keyboard ----- x1
 USB receiver ----- x1
 User manual ----- x1
 Type-C cable ----- x1

K3300G

Wireless keyboard ----- x1
 USB receiver ----- x1
 User manual ----- x1
 Button cell ----- x1

Applicable Systems

Windows 7, Windows 8, Windows 10, MAC OS operating system.

Function of keyboard specification



FN + ↑: PAGE UP
 FN + ↓: PAGE DOWN
 FN + ⇄: HOME
 FN + ⇅: END

K3300D

1. Mode:

FN+1: 2.4G, light turns red
 FN+2: BT 3.0, light turns green
 FN+3: BT 5.0, light turns blue

In the Bluetooth mode, Bluetooth 3.0 and Bluetooth 5.0 can be searched by the device.

2. Matching code

2.1 2.4G: Under the mode of 2.4 G, the indicate light flashes red, press ESC and = for 3s at the same time, then the keyboard enter the state of matching code. Insert the receiver to the USB port of device, then light stops flashing and keyboard work normally. If code match failed, after 20s, the keyboard will fall asleep. Repeat the above steps to try match code again.

2.2 BT3.0: Under the mode of BT3.0, the indicate light flashes green, and the keyboard will try to connect the last device automatically, if it failed then enter open mode, green light flashes fast, then the BT3.0 and BT5.0 can be searched. Please choose the correct device according to the

FC CE RoHS

www.deluxworld.com

Bluetooth version of device. If connect failed in 2 minutes, the keyboard will sleep. Press one key to awake it.

2.3 BT5.0: Under the mode of BT5.0, the indicate light flashes blue, and the keyboard will try to connect the last device automatically, if it failed then enter open mode, blue light flashes fast, then the BT3.0 and BT5.0 can be searched. Please choose the correct device according to the Bluetooth version of device. If connect failed in 2 minutes, the keyboard will fall asleep. Press any one key to awake it.

3. Disconnect Bluetooth

3.1 Press FN+ 1/2/3 switch to corresponding mode, the corresponding mode light flash faster, then the Bluetooth enter open mode.

3.2 Untie Bluetooth in the device

4. Support multiple layout

FN+Q: APPLE layout
 FN+W: ANDROID layout
 FN+E: WINDOWS layout

In different layout, multimedia key have different function.
 Note: some keys' function may not work properly because of the system

Function of multimedia keys in different version

KEY	WIN	Mac	Android
ESC	Home Page	Home Page	Home Page
F1	Brightness -	Brightness -	Brightness -
F2	Brightness +	Brightness +	Brightness +
F3	Soft-keyboard	All Windows	Soft-keyboard
F4	Music	All Applications	
F5	Search	Search	Search
F6	Input method	Input method	Input method
F7	Previous	Previous	Previous
F8	Pause	Pause	Pause
F9	Next	Next	Next
F10	Mute	Mute	Mute
F11	Volume -	Volume -	Volume -
F12	Volume +	Volume +	Volume +
Del	Win Lock	Win Lock	Win Lock

K3300G

1. Mode

2.4G Connection.

2. Matching code

Esc + Q

3. Multimedia function:

FN+F1-F12: backward, forward, homepage, email, music, pause/play, stop, previous, next, volume +, volume -, mute.

Working Environment:

- The receiver should be far away from the monitor, outside disc driver or other electronic products. 20 CM distance is suggested in order to prevent the radio disturbance produced by other electronic products.
- The radio signal can penetrate lignin, glass and other the non-metallic objects, realizing 360 degree free transmit, however, it can not penetrate the metal materials. So please not put the mouse, keyboard and the receiver onto the metallic tabletop. The ideal distance is above 20 CM.
- Please be sure there is no big metal between the mouse (keyboard) and receiver, other wise the connection will be affected.
- Optical mouse is suitable for operating media wooden, paper or cloth, but not for the ratent, such as glass and smooth rubber. A mouse pad is needed in such environment.
- The standardized receiving distance we offered is under certain radio disturbance environment, the normal environment are better, the actual receiving distance is higher than standardized, but if mix-machine, motor, electric drill and other strong electronic equipments operating nearby, which may lead to slowly receiving or other abnormality.

Debugging Tips:

- Check the receiver again, and make sure it is connected to the USB port.
- Check the battery direction should be correct.
- Re-establish the mouse (or keyboard) and the receiver communication channel.
- Reduce the distance of the receiver and the mouse (or keyboard).
- Change new battery.
- Put the "On/Off" button to "On".

设计说明：

- 1、尺寸：90x135mm(公差+/-1mm)
- 2、材质：100g书写纸
- 3、颜色：单色印刷
- 4、装订方式：风琴折页

分 发	<input type="checkbox"/> 研发部 <input checked="" type="checkbox"/> 产品部 <input checked="" type="checkbox"/> 资材部 <input checked="" type="checkbox"/> 品保部 <input checked="" type="checkbox"/> 生产部 <input checked="" type="checkbox"/> 工程部 <input type="checkbox"/> 海外营销部 <input checked="" type="checkbox"/> 国内营销部 <input checked="" type="checkbox"/> 文控中心	批 准	审 核	名 称 K3300共用 海外标准说明书 料 号 R3.4.K330006002A 设 计 毛武峰/2020-04-29
-----	--	-----	-----	---



DELUX 多彩

深圳市多彩实业有限公司

SHENZHEN DELUX INDUSTRY CO., LTD.

