

Notes:

Press right button and backward button for 3s to disable the function of forward and backward key.
When low battery, the low battery indicator flashes red.

Debugging Tips:

Check if the receiver is connected to the USB port.
Check if the ON/OFF button is in ON mode.
Check if the battery is installed in the correct direction.
Check if the battery capacity is enough.
Check the effective distance between mouse the receiver and shorten it.
Rebuild up the connection between the mouse and receiver.



Vertical Mouse




User Manual

Thank you for choosing this wireless vertical mouse. Please read the user manual carefully when using this product.

Contents:

Wireless vertical mouse	x1
Palm rest	x1
USB nano receiver	x1
User manual	x1

Button Function:

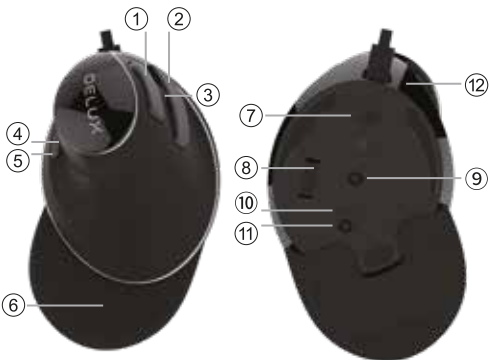

①	Left Key
②	Right key
③	Roller wheel
④	Forward key
⑤	Backward key
⑥	Removable plam rest
⑦	ON/OFF
⑧	USB receiver
⑨	DPI key
⑩	Mode/DPI/Pairing Indicator
⑪	Mode switch key
⑫	Low battery indicator

Vertical mouse, worm bionic shape design
Anti-skidding design
Ergonomic design with removable palm, reduce hand and wrist pain

Mode Switch:

Press the Mode Switch Key(Button ⑧) to switch the mouse among 2.4G, BT1 and BT2. Switch to the BT mode, the mode indicator flashes and turn off.

2.4G Mode:

Plug and play.
If the connection break off, do the steps: keep the mouse in 2.4G mode, press left key, middle key and right key at the same time until the 2.4G blue indicator flash, plug the receiver then the blue indicator stop flashing and turn off. The mouse matched successfully.

Bluetooth Mode:

Switch the mode switch key to any Bluetooth mode, press the mode switch key for 3s. Corresponding blue indicator light flash, and the mouse enters the Bluetooth pairing mode. Then “BT3.0 Mouse” or “BT5.0 Mouse” can be searched in devices, match successfully then the mouse can work normally.

DPI Switch:

Press the DPI cycle button(in the bottom of the mouse) switch among 4 level DPI and the DPI indicator
800(indicator flashes once)-1600(indicator flash twice)-
2400(indicator flashes thrice)-4000(indicator flashes four times)
The default DPI is 1600

► **Забележка:**

Натиснете десен бутон и назан за 3 сек., за да забраните функцията напред-назад бутони. Когато зарядът на батерията е нисък, индикатор за ниска батерия ще премига в червено.

► **Съвети за отстраняване на грешки:**

Проверете дали приемникът е свързан с USB порт.
Проверете дали бутон On/Off е в положение ON.
Проверете дали полюсите на батерията са спазени правилно.
Проверете дали зарядът в батерията е достатъчен.
Проверете дали ефективната дистанция е спамена (между мишката и приемника).
Установете връзката между приемник-мишка отново.



3.

DELUX

Вертикална мишка M618PD



Ръководство на потребителя

Благодарим Ви, че избрахте безжичната мишка. Моля, прочетете това ръководство внимателно.

► **Съдържание на пакета:**

- 1x Мишка
- 1x Ръководство на потребителя
- 1x USB нано приемник
- 1x Подложка за длани

► **Функции на бутоните:**



- | | |
|---|-------------------------------|
| ① | Ляв бутон |
| ② | Десен бутон |
| ③ | Скролер |
| ④ | Напред |
| ⑤ | Назад |
| ⑥ | Подвижна подложка |
| ⑦ | On/Off бутон |
| ⑧ | USB нано приемник |
| ⑨ | DPI |
| ⑩ | Индикатор за сдвояване/DPI |
| ⑪ | Бутон за режимите |
| ⑫ | Индикатор за изтощена батерия |

Вертикална мишка, бионична форма

Дизайн против плъзгане

Ергономичен дизайн с подвижна опора за длани, намаляване на болката в ръката и китката

1.

► **Смяна на режими:**

Натиснете бутон за превключване на режима ⑧ за да превключите мишката между 2.4G, BT1 или BT2 режими. Превключете в режим BT, след което индикаторът за режим мига и се изключва.

► **2.4G режим:**

Plug&Play.

Ако връзката прекъсне, направете: задръжте мишката в режим 2.4G, натиснете едновременно ляв, среден и десен бутон едновременно, докато 2.4G син индикатор мига. Включете приемника, след което синият индикатор спира да мига и се изключва. Мишката е свързана успешно.

► **BT режим:**

Превключете бутон до всеки BT режим, като го натиснете за 3 сек. Син индикатор ще започне да мига и мишката е в режим на сдвояване. Потърсете „BT3.0 Mouse“ или „BT5.0 Mouse“ и сдвоете. Мишката работи в BT режим.

► **Промяна на чувствителността, DPI**

Натиснете DPI кръглия бутон в долната част на мишката измежду 4 нива: 800 DPI - премига 1 път, 1600 DPI - премига 2 пъти, 2400 DPI - премига 3 пъти, 4000 DPI - 4 пъти. 1600 DPI е по подразбиране.

2.