


# DELUX

## Vertical Mouse

### M618 mini

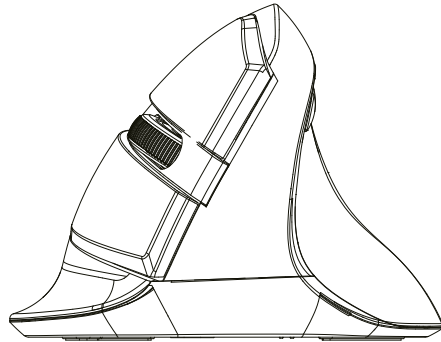


## User Manual

Thank you for choosing this special wireless vertical mouse. Please read the user manual carefully when using this product.


### ▶ Contents:

- Wireless vertical mouse -----X1
- User manual -----X1
- USB nano receiver -----X1
- CD driver for optional -----X1


### ▶ Button Function:

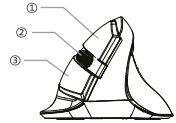


① Left click




② Scroll wheel

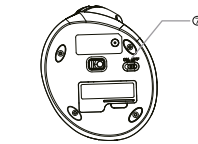


③ Right click




④ DPI cycle

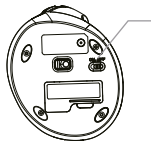

⑤ Backward

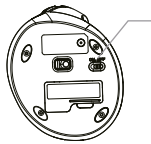

⑥ Forward

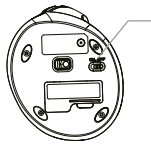

⑦ ON/OFF button

### ▶ Features

- Vertical mouse, worm bionic shape design.

### ▶ Installation

Plug the USB connector for wired mouse (or USB Nano receiver for wireless version) to the USB port in the computer, after detecting successfully it will work normally.

### ▶ Specification

DPI	800 /1200 /1600
Polling rate	125Hz
Working Voltage	1.5V
Working Current	< 20mA

### ▶ Receiver Connection

Equipping the mouse with battery, insert the Nano receiver to the USB port of your computer, pushing the ON button on the bottom of the mouse, and the receiver will detect the device automatically, plug and play.

The red light will flash once if you shift the DPI to the first gear, will flash twice when you shift the DPI to the second gear, etc. Also it will flash when the voltage is low.

### ▶ Driver Instruction

#### 1. Installation

Download the driver from [www.deluxworld.com](http://www.deluxworld.com) or the CD in the package, install the driver.

Note: Please make sure this mouse is already connected to computer when setting the functions in the driver.

#### 2. Setting

These functions can be customized as below.



3.



#### 3. Macro setting:

Click "Assign Macro" to enter into Macro settings, click NEW and name the macro, and click "Left click" on any blank space below MACRO SELECT to confirm the name. Then Start Record, after finishing the record, please click "STOP RECORD"; and click "OK" to save the macro. After choosing certain macro, the background of this macro will turn green, you can edit the macro.

#### 4. Other functions:

Basic: Cut, Copy, Paste, etc. 8 functions are available.

Advanced: Switch window, close window, etc. 6 functions are available.

Media: Previous track, next track, stop, etc. 7 functions are available.

You can also adjust the speed of tracking, double-click and scrolling.

After setting the functions please click "Apply"; if you need default functions just click "Restore Defaults."

4.

### Building Up the Connection Between Mouse and Receiver

If your mouse cannot work normally, you can try to build up the connection again between mouse and receiver, as following steps:

1. Take out the Nano receiver from computer and insert again, it will detect automatically for about 15 seconds.
2. Keep the mouse in ON mode and with battery in correct direction.
3. Keep the effective distance within 10 CM between the mouse and receiver.
4. Press the middle button (scroll wheel) and right button at the same time for about 1~3 seconds, then release it. The connection is being built for about 10 seconds.
5. If cannot build up the connection in 10 seconds, please repeat the above steps.

### Debugging Tips

Check the receiver if is connected to the USB port.

Check the ON/OFF button if in ON mode.

Check the effective distance between mouse the receiver and shorten it.

Rebuild up the connection between the mouse and receiver.




5.

# DELUX

## Вертикална мишка

### M618 mini

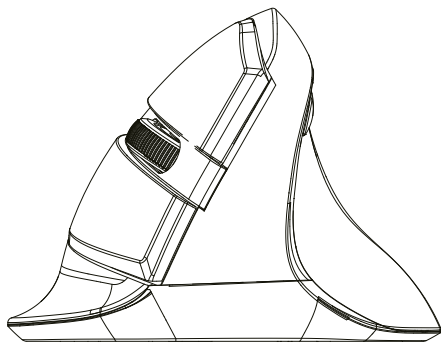

## Ръководство на потребителя


Благодарим ви, че избрахте тази вертикална мишка. Моля, прочетете ръководството на потребителя внимателно, преди да започнете да я използвате.

### ► Съдържание на пакета:

- 1x Безжична мишка
- 1x Ръководство на потребителя
- 1x USB нано приемник
- 1x disk с драйвъри (опционален)

### ► Функции на бутоните

①	Ляв бутон
②	Скролер
③	Десен бутон
④	DPI бутон
⑤	Напред
⑥	Назад
⑦	On/Off бутон

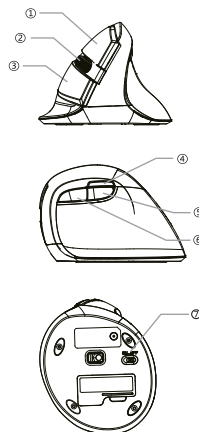

### ► Характеристики на продукта

- Вертикална мишка, топъл бионичен дизайн.

### ► Инсталиране

Свържете USB конектора за кабелна връзка с мишката или с USB нано приемник – за безжичен режим – към USB порт на компютър. След разпознаване и инсталиране на основните драйвъри, мишката ще работи нормално.

### ► Спецификации

Свържете USB конектора за кабелна връзка с мишката или с USB нано приемник – за безжичен режим – към USB порт на компютър. След разпознаване и инсталиране на основните драйвъри, мишката ще работи нормално.

DPI	800/1200/1600
Polling rate	125Hz
Working voltage	1.5V
Working current	<20 mA

### ► Свързване с приемника

Включете нано приемника към USB порт на компютър и натиснете бутон в положение ON в долната част на мишката и приемника автоматично ще открие устройството. Червена светлина ще проблисва веднъж при натискане на бутон DPI за първи режим, двойно – за втори режим и т.н. Премизването ще се активира и при нисък волтаж в батерията.

### ► Инсталиране на драйвъра

#### 1. Инсталация

Изтеглете драйвъра от сайта [www.deluxworld.com/en](http://www.deluxworld.com/en) и го инсталирайте.

Забележка: Уверете се, че мишката е свързана правилно към компютър и работи.

#### 2. Настройване

Функциите се настройват, както е показано:



③



#### 3. Макро настройка

Кликнете върху „Assign Macro“, за да влезете в настройване на макроси на мишката. След това добавете нов чрез бутон NEW и въведете име в полето. Натиснете „Start record“ и „OK“, за да запаметите. Когато сте готови с настройването натиснете „Stop record“. След като изберете определен макрос, фонът на този макрос ще стане зелен. Можете да редактирате макроса.

#### 4. Други функции

Основни: Copy/Paste/Cut/ и 8 функции са налични.

Разширени: switch window, close window и 6 допълнителни са налични.

Медия: пуск, стоп, предишна/следваща песен и 7 допълнителни.

Може да регулирате скоростта на проследяване, двойния клик и скролирането.

След настройване на функциите натиснете „Apply“. За заводски настройки изберете „Restore Defaults“.

④

### ► Установяване на връзка между мишката и приемника

Ако мишката не работи нормално, опитайте да установите връзката наново като използвате следните стъпки:

1. Извадете нано приемника от компютъра и го сложете отново – ще се разпознае автоматично за около 15 сек.
2. Дръжте мишката в положение ON и с правилно поставена батерия.
3. Спазвайте ефективна дистанция от около 10 см. между приемника и мишката.
4. Натиснете скролера и десен бутон едновременно за ~3 сек. Връзката ще се установи за 10 сек.
5. Ако връзката е неуспешна за 10 сек. моля, повторете горните стъпки.

### ► Съвети за отстраняване на грешки

Проверете дали приемникът е свързан към USB порт.

Проверете дали мишката е режим включена – ON.

Проверете ефективната дистанция между мишката и приемника. При необходимост я скъсете.

Установете връзката наново между мишката и приемника.

