




GAMING MOUSE

Thank you for choosing this gaming mouse, please read the user manual carefully when you use this product.

Contents:

- Mouse ----- x 1
- User Manual ----- x 1
- CD Driver (Optional) ----- x 1

Button Function:

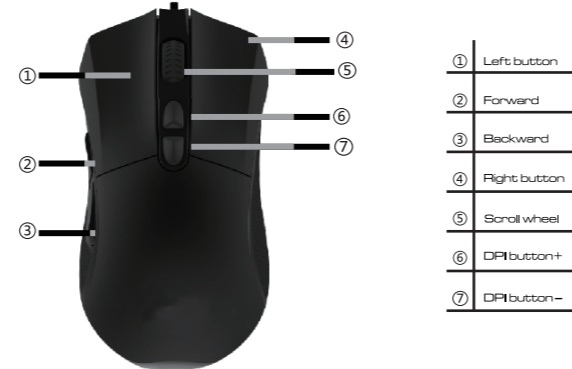

Note:
By pressing 3 buttons (Left click, Scroll wheel, Right click) at the same time for about 5 seconds, the light mode can be adjusted. It is showed as:
Floating RGB mode, All off, Full-lighted, Breathing.

- Floating RGB mode: The light color is floating (except scroll wheel)
- All off mode: All light will be off, but the scroll wheel light cannot be off.
- Full-lighted mode : Only one light color for whole mouse, you can change the color by DPI shift (pressing DPI button).
- Breathing mode: 5 gear light color will change automatically (except the scroll wheel).

*** For any mode, the light of scroll wheel will not be Off, it will keep the current color. Only by pressing DPI button you can change the color.

Mouse Usage

Connect the mouse with your computer by USB port, it can work normally after detecting finished. If needed, you can set the button functions as followings.

Different Solution Option

Solution	A3050	PMW3325	PAW3310
DPI	5 gear DPI shift, top to 4000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)
Acceleration	20G	20G	30G
Polling rate	125Hz~1000Hz	125Hz~1000Hz	125Hz~1000Hz
Working voltage	5V	5V	5V
Working current	≤200mA	≤200mA	≤200mA

Driver Installation

Install the driver from the CD in the package, or you can download it from:
<http://www.deluxworld.com/en/index.php?ac=article&at=list&tid=283>
This mouse has different solution for choosing, please pay attention to the mouse you bought (It is showed on the rating label), and when install the driver to choose correct solution (A3050 or PMW3310 or PMW3325).

Tip:
Please make sure the mouse has already been connected to our computer when installing the driver.


Driver Setting Instruction

After installation ok, get into the setting interface, you can start to set up the mouse function.



A. Button Setting (Custom)


Choose one button you want to set, 11 functions can be set for the chosen button.

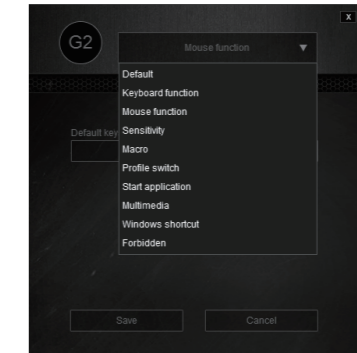

B. Performance:

By adjusting the coordinate, you can set the Sensitivity (DPI), Pointer Speed and Polling Rate.

Tip:
DPI value and the parameters of polling rate will be different because of different solution for mouse, please in kind prevail.

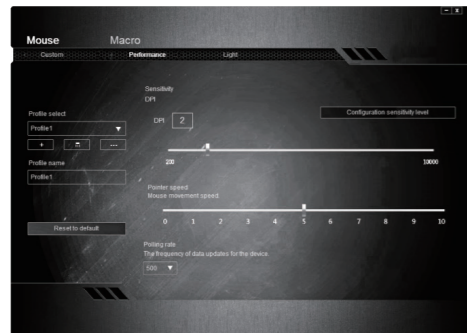

C. Light Setting:

You can set different light mode: Floating RGB Mode, All off, Full-lighted, Breathing. And you can set the related parameters.



Macro:

Choose a Macro or create a new one, click OK and Apply it.

Assign a Macro:

- 1) Open Macro on the main interface
- 2) Choose a existed macro to modify it, or open a new one and name it.
- 3) Click "Record" to start the recording and finish the macro edit.
- 4) You can set the default delay or no delay by choosing Record delay.



Environment and Usage

The optical mouse is suitable for a variety of colors and materials planes, such as wood, paper, cloth, etc. but not suitable for the smooth glass or mirror. If encounter this kind of situation, it is recommended that you use the mouse pad. (For the mouse with PAW3310 solution, in order to use it better, please work it on the mouse pad).



РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ




ГЕЙМЪРСКА МИШКА

Благодарим Ви, че избрахте тази геймърска мишка. Моля, прочетете настоящото ръководство преди употребата ѝ.

Съдържание:

- 1x Мишка
- 1x Ръководство на потребителя
- 1x Диск с драйвъри (опционален)

Функции на клавишите

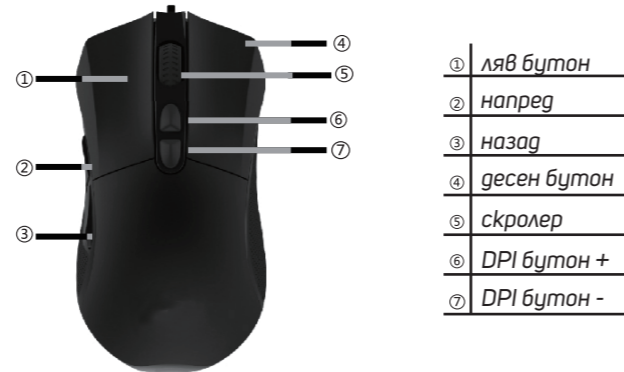

Забележка:

Едновременното натискане на бутони ляв, скролер и десен за ~5 сек. може да настроите подсветката измежду: Floating RGB, изключен, дишащ.

Floating RGB: светещия цвят се движи по мишката, с изключение на скролера.

Изключен режим: всички светлини са изключени, с изключение на скролера.

Дишащ режим: 5 нива на подсветка ще се сменят автоматично.

1.

Употреба

Свържете мишката чрез USB порт на компютър, за да работи нормално. Ако е необходимо може да настроите функциите на бутоните както следва:

Solution	A3050	PMW3325	PAW3310
DPI	5 gear DPI shift, top to 4000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)	5 gear DPI shift, top to 10000 DPI (by driver)
Acceleration	20G	20G	30G
Polling rate	125Hz ~ 1000Hz	125Hz ~ 1000Hz	125Hz~1000Hz
Working voltage	5V	5V	5V
Working current	≤200mA	≤200mA	≤200mA

Инсталиране на драйвъра

Инсталирайте драйвъра от вклучения (опция) в пакета disk или го изтеглете от:

www.deluxworld.com/en/index.php?ac=article&at=list&id=283

Тази мишка разполага с различни решения за избор, затова обърнете внимание кой е вашият вариант (A3050; PMW3310 или PMW3325)

Съвет:

Уверете се, че мишката е правилно свързана към компютър, когато инсталирате драйвъра.

2.

Инструкции за инсталиране на драйвъра

След като инсталацията завърши успешно, влезте в потребителския интерфейс, за да настроите функциите.



А. Настройване на бутоните (потребителско)
Изберете бутон, който желаете да настроите и му задайте до една от 11 функции.



3.

Б. Производителност

Със задаване на стойности, може да настроите DPI чувствителността, скоростта на показалеца и Polling rate на мишката.

Съвет:

DPI стойностите и параметрите на Polling rate ще са различни за различните сензори мишката.



В. Настройка на подсветката

Може да настроите различни светлинни режими, от които: Floating RGB, изключен, дишащ и full lighted, както и свързаните параметри.



4.

Макро настройки:

Изберете таб „Macro“, създайте нов макрос или редактирайте съществуващ.

Задаване на макро:

- 1) Отворете „Macro“ от потребителския интерфейс
- 2) Изберете съществуващ макрос, за да настроите или отворете нов и му задайте име.
- 3) Натиснете „Record“ за начало на записа и край, за да запазите промяната.
- 4) Може да зададете заводско повторение като изберете Record delay.



Грижа за околната среда и употреба

Оптичната мишка е подходяща за различни цветове и плоскости от материали като дърво, хартия, плат и др., но не е подходяща за стъкло или огледало. Ако се сблъскате с подобна ситуация, не се препоръчва да използвате мишката. (За мишка със сензор PAW3310 - за да я използвате по-добре, моля, работете върху подложка за мишката).

5.

РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ

ГЕЙМЪРСКА МИШКА

