




Set up with videos:

Scan QR code or visit
<https://www.tp-link.com/support/setup-video/#wi-fi-routers>




1 Connect the Hardware

! **Unplug the power** to turn off your modem, if any, and remove the backup battery if it has one.

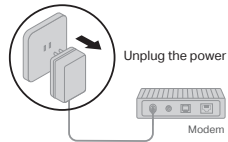


Hold the antennas from the base and push them fully into the slots.



If your internet connection is through an Ethernet cable directly from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable to the router's 2.5 Gbps WAN/LAN port, and then follow steps 3 and 4 to complete the hardware connection.

*Image may differ from actual product.

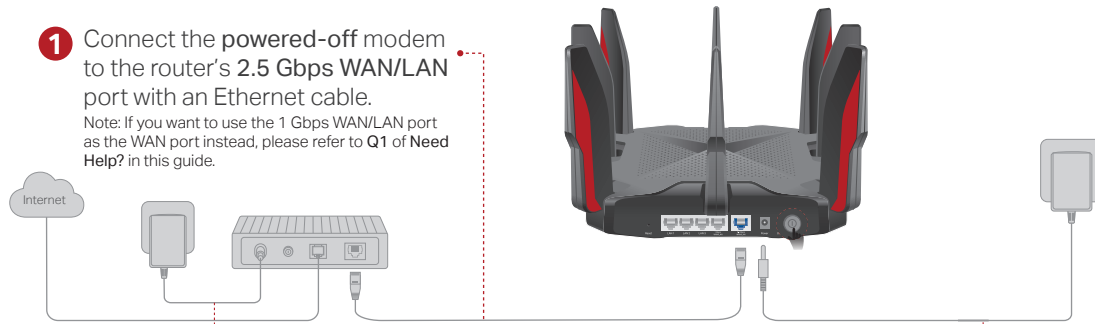

1 Connect the **powered-off** modem to the router's 2.5 Gbps WAN/LAN port with an Ethernet cable.

Note: If you want to use the 1 Gbps WAN/LAN port as the WAN port instead, please refer to Q1 of **Need Help?** in this guide.

2 Power on the modem, and then wait about 2 minutes for it to restart.


4 Verify the ▼ LED on the top is solid on (red or white) before moving on.

3 Connect the power adapter to the router and turn it on.

2 Configure the Router

Method ONE: Via TP-Link Tether App


1. Download the Tether app.



2. Open the Tether app and log in with your TP-Link ID.

Note: If you don't have an account, create one first.

3. Tap the **+** button in the Tether app and select **Gaming router > Archer GX90**. Follow the steps to complete the setup and connect to the internet.

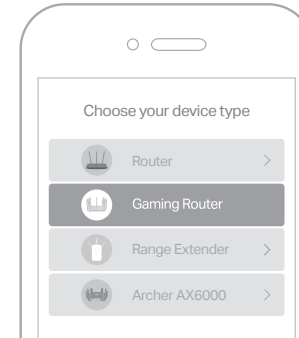


Enjoy the internet !

To enjoy a more complete service from TP-Link, bind your TP-Link ID to the router.

Method TWO: Via a Web Browser


1. Connect your device to the router wirelessly or with an Ethernet cable.

The default wireless network names (SSIDs) and password are printed on the label at the bottom of the router.

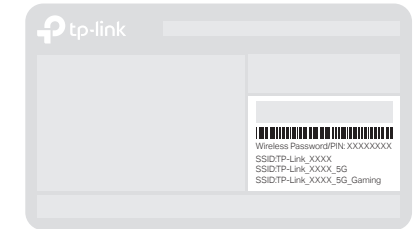

2. Launch a web browser, and enter <http://tplinkwifi.net> or <http://192.168.0.1> in the address bar. Create a password to log in.



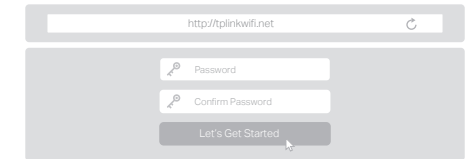



Note: If the login window does not appear, please refer to Q2 of **Need Help?** in this guide.






3. Follow the step-by-step instructions to set up the internet connection and register for the TP-Link Cloud service.

Enjoy the internet !

LED & Button Explanation

-  Pulsing Orange
The system is starting up.
-  Solid White
The router is working normally.
-  Solid Red
No internet connection.
-  Pulsing Red
The Wi-Fi is off and there is no internet connection.
-  Solid Orange
The router is connected to the internet, but the Wi-Fi is off.
-  Pulsing White
The firmware is being upgraded, WPS connection is being established or the router is being reset.

-  WPS Button
Press the WPS button, and immediately press the WPS button on your client to start the WPS process.
-  Wi-Fi button
Press the Wi-Fi button for at least 2 seconds to turn on or off the wireless function of your router.
-  LED button
Press the LED button to turn on or off the LEDs of your router.

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use any other chargers than those recommended.
- Do not use damaged charger or USB cable to charge the device.
- Do not use the device where wireless devices are not allowed.
- Adapter shall be installed near the equipment and shall be easily accessible.

For technical support, replacement services, the user guide and more information, please visit <https://www.tp-link.com/support>

Need Help?



- Q1. What should I do if I want to use 1 Gbps WAN/LAN port for internet service?
- Connect to the 1 Gbps WAN/LAN port with an Ethernet cable. During the quick network setup, select the 1 Gbps WAN/LAN port as the Internet port. Or after the network setup, you can go to **Tools > Internet Connection > Internet Port** (Tether app) or **Internet > Internet Port** (web management page) to change it.
- Q2. What should I do if I can't access the web management page?
- Reboot your router and try again.
 - If the computer is set to a static IP, change its settings to obtain an IP address automatically.
 - Verify that <http://tplinkwifi.net> is correctly entered in the web browser. Alternatively, enter <http://192.168.0.1> or <http://192.168.1.1> in the web browser.
 - Use another web browser and try again.
 - Disable and enable the network adapter in use.
- Q3. What should I do if I can't access the internet?
- Reboot your modem and router, then try again.
 - Check if the internet is working normally by connecting a computer directly to the modem via an Ethernet cable. If it is not, contact your internet service provider.
 - Log in to the web management page of the router, and go to the **Network Map** and check whether the internet IP address is valid or not. If it is, please run the **Quick Setup** again; otherwise, check the hardware connection.
 - For cable modem users, log in to the web management page of the router and go to **Advanced > Network > Internet > MAC Clone**. Select **Clone Current Device MAC** and click **SAVE**. Then reboot both the modem and the router.
- Q4. What should I do if I forget my wireless password?
- If you have not changed the default wireless password, it can be found on the label at the bottom of the router.
 - Connect a computer directly to the router using an Ethernet cable. Log in to the router's web management page at <http://tplinkwifi.net>, and go to the **Wireless** page to retrieve or reset your wireless password.
- Q5. What should I do if I forget my web management page password?
- If you are using a TP-Link ID to log in, click **Forgot Password?** on the login page and then follow the instructions to reset it.
 - Alternatively, press and hold the Reset button for at least 2 seconds. Then visit <http://tplinkwifi.net> to create a new login password.

To communicate with TP-Link users or engineers, visit <https://community.tp-link.com> to join the TP-Link Community.

If you have any suggestions or needs for our product guides, you are welcome to email techwriter@tp-link.com.cn.

Quick Installation Guide



AX6600 Tri-Band Wi-Fi 6 Gaming Router

Archer GX90

