

# Installation Guide

5/6/8-Port Gigabit Desktop PoE Switch

## LED Explanation

### Power


● On: Power on  
● Off: Power off

### PoE MAX

● DS105GP/DS108GP  
On:  $58\text{ W} \leq \text{Total power supply} < 65\text{ W}$   
Flashing:  $\text{Total power supply} \geq 65\text{ W}$   
Off:  $\text{Total power supply} < 58\text{ W}$

● DS106GPP  
On:  $57\text{ W} \leq \text{Total power supply} < 64\text{ W}$   
Flashing:  $\text{Total power supply} \geq 64\text{ W}$   
Off:  $\text{Total power supply} < 57\text{ W}$

### Link/Act and PoE Status



● On (Green): Connected to a 1000 Mbps device  
● On (Yellow): Connected to a 10/100 Mbps device  
Flashing: Transmitting/receiving data  
● Off: No device is connected to the corresponding port.  
● On: Providing PoE power  
Flashing: Current-overload/Short-circuit  
● Off: Not providing PoE power

## Switches Explanation

Note: The port numbers in brackets indicate the ports where the feature takes effect. For example, when Extend (Port 1-2) is toggled to On, the Extend mode will be enabled for ports 1-2.

### Extend


Off: The corresponding ports run at 10/100/1000 Mbps and support PoE power supply up to 100 m away.  
On: The corresponding ports run at 10 Mbps and support PoE power supply up to 250 m away.

### Recovery

Off: The PoE Auto Recovery function is disabled.  
On: The switch will constantly detect the working status of a PoE powered device (PD). When the switch finds that the PD works abnormally, the switch will reboot it.

Note: For simplicity, we will take DS105GP for example throughout this Guide.

## Connection

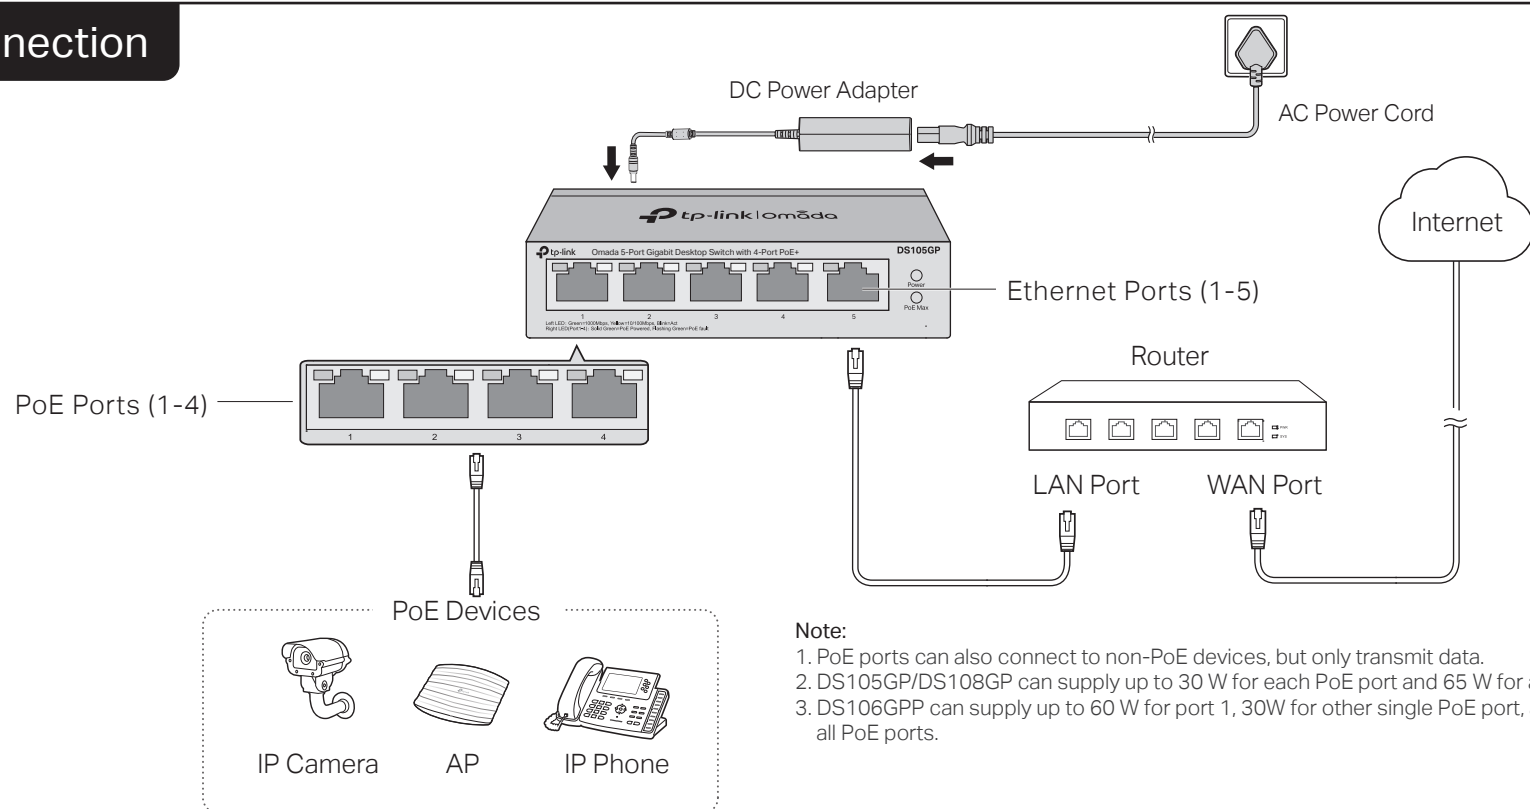

### Note:

- PoE ports can also connect to non-PoE devices, but only transmit data.
- DS105GP/DS108GP can supply up to 30 W for each PoE port and 65 W for all PoE ports.
- DS106GPP can supply up to 60 W for port 1, 30W for other single PoE port, and 64 W for all PoE ports.

# Specifications

## General Specifications

Standard	IEEE 802.3i, IEEE 802.3u, IEEE 802.3ab, IEEE 802.3x, IEEE 802.3af, IEEE 802.3at, IEEE 802.3bt (for DS106GPP only), IEEE 802.1p
Interface	DS105GP: 5 10/100/1000 Mbps RJ45 Ports Auto-Negotiation MDI/MDIX PoE Ports: Port 1-Port 4 DS106GPP: 6 10/100/1000 Mbps RJ45 Ports Auto-Negotiation MDI/MDIX PoE Ports: Port 1-Port 4 DS108GP: 8 10/100/1000 Mbps RJ45 Ports Auto-Negotiation MDI/MDIX PoE Ports: Port 1-Port 8 Total Power Supply: 65 W (DS105GP/DS108GP)/64W (DS106GPP)
Network Media (Cable)	10BASE-T: UTP category 3, 4, 5 cable (maximum 100 m); EIA/TIA-568 100Ω STP (maximum 100 m) 100BASE-TX: UTP category 5, 5e cable (maximum 100 m); EIA/TIA-568 100Ω STP (maximum 100 m) 1000BASE-T: UTP category 5e cable or above (maximum 100 m); EIA/TIA-568 100Ω STP (maximum 100 m)
Switching Capacity	DS105GP: 10 Gbps DS106GPP: 12 Gbps DS108GP: 16 Gbps
Transfer Method	Store-and-Forward
MAC Address Learning	Automatically learning, automatically aging
Power Supply	External Power Adapter Input: 100-240 VAC, 50/60 Hz Output: 53.5 VDC /1.31 A
Wall Mountable	Yes
Distance Between Mounting Holes	DS105GP: 39 mm DS106GPP/DS108GP: 94mm

## Environmental and Physical Specifications

Operating Temperature	0 °C to 40 °C (32 °F to 104 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Operating Humidity	10% to 90%RH non-condensing
Storage Humidity	5% to 90%RH non-condensing

## EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/support/ce/>

## UK declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Electromagnetic Compatibility Regulations 2016 and Electrical Equipment (Safety) Regulations 2016.

The original UK declaration of conformity may be found at <https://www.tp-link.com/support/ukca>



# Frequently Asked Questions (FAQ)

## Q1. Why is the Power LED not lit?

The Power LED should be lit when the power system is working normally. If the Power LED is not lit, please try the following:

- A1: Make sure the AC power cord is connected to the switch with power source properly.
- A2: Make sure the voltage of the power supply meets the requirements of the input voltage of the switch.
- A3: Make sure the power source is on.

## Q2. Why is the Link/Act LED not lit while a device is connected to the corresponding port?

It is recommended that you check the following items:

- A1: Make sure that the cable connectors are firmly plugged into the switch and the device.
- A2: Make sure the connected device is turned on and works normally.
- A3: The cable must be less than 100 meters long (328 feet). If Extend Mode is enabled, it should be less than 250 meters (820 feet).

## Q3. Why are PoE ports not supplying power for PoE devices?

When the total power consumption of connected PoE devices exceeds the maximum, the PoE port with a smaller port number has higher priority. The system will cut off power to the ports with larger port numbers to ensure supplying to other ports.

Take DS105GP as an example. If port 1, 2 and 4 are consuming 15.4 W respectively, and an additional PoE device with 19 W is connected to port 3, the system will cut off the power of port 4 to compensate for the overload.

## Q4. What should I notice before using the PoE Auto Recovery feature?

- A1: Before upgrading a connected PoE powered device (PD), disable PoE Auto Recovery to avoid the PD's damage.
- A2: When a PD does not send data packets to the switch for a long period in certain scenarios (e.g. an IPC in sleep mode), disable PoE Auto Recovery to avoid the PD repeatedly rebooting.



To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.



For technical support and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



## Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Place the device with its bottom surface downward.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- The plug on the power supply cord is used as the disconnect device, the socket-outlet shall be easily accessible.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Plug the product into the wall outlets with earthing connection through the power supply cord.
- The PoE ports shall not be used to charge lithium batteries or devices supplied by lithium batteries.