



User Guide

Easy Managed Switch

1910013715 REV1.0.0

August 2024

CONTENTS

About This Guide

Intended Readers	1
Conventions.....	1
More Information	1

Introduction

Product Overview	4
Logging Into the Switch.....	5

Managing System

System	8
Overview.....	8
Supported Features.....	8
System Summary.....	9
Viewing the System Information.....	9
Specifying the Device Name.....	10
Configuring IP.....	11
Configuring User Account.....	13
Configuring LED	14
Appendix: Default Parameters.....	15

Switching

Switching.....	17
Overview.....	17
Supported Features.....	17
Configuring Ports.....	19
Configuring IGMP Snooping	21
Configuring LAG.....	22
Configuration Examples.....	23
Example for Configuring IGMP Snooping.....	23
Network Requirements.....	23
Configuration Scheme.....	23
Configuration Steps	24
Example for Configuring LAG	25

Network Requirements	25
Configuration Steps	26
Appendix: Default Parameters	27

Configuring VLAN

Overview	29
Configuring MTU VLAN.....	31
Configuring Port-Based VLAN.....	32
Configuring 802.1Q VLAN.....	33
Configuring the VLAN	33
Configuring the PVID.....	35
Configuring Management VLAN.....	36
Configuration Example for 802.1Q VLAN.....	37
Network Requirements.....	37
Configuration Scheme	37
Configuration Steps.....	39
Appendix: Default Parameters.....	41

Configuring QoS

QoS.....	43
Overview.....	43
Supported Features.....	43
Configuring Basic QoS	44
Configuring QoS in Port-Based Mode.....	45
Configuring QoS in 802.1p-Based Mode.....	47
Configuring QoS in DSCP-Based Mode.....	48
Configuring Rate Limit	51
Configuring Storm Control.....	52
Configuration Example for Basic QoS.....	54
Network Requirements.....	54
Configuration Scheme	54
Configuration Steps.....	55
Appendix: Default Parameters.....	57

Monitoring

Monitoring	59
Overview.....	59

Supported Features	59
Viewing Traffic Summary	60
Configuring Mirroring	61
Testing Cables	63
Configuring Loop Prevention	64
Appendix: Default Parameters	65

System Tools

System Tools	67
Overview	67
Supported Features	67
Upgrading the Firmware	68
Backing up and Restoring the Switch	70
Saving the Current Configuration	70
Restoring to the Previous Configuration	71
Resetting the Switch	73
Rebooting the Switch	74

Controller Settings

Controller Settings	76
Overview	76
Supported Features	76
Configuring Controller Settings	77
Appendix: Default Parameters	79

Configuring PoE (Only for Certain Devices)

PoE	81
Overview	81
Supported Features	81
Configuring PoE	82
Configuring PoE Auto Recovery	84
Configuring Extend Mode	86
Appendix: Default Parameters	87

About This Guide

This Configuration Guide provides information for configuring the Easy Managed Switch via the web interface. Read this guide carefully before operation.

You can also configure and manage the switch using the Omada Controller. For more information, refer to the **Omada SDN Controller User Guide**. Go to the website <https://www.tp-link.com/support/?type=smb>, search Omada SDN Controller, and you can find the guide on the product Support web page.

Intended Readers

This Guide is intended for network managers familiar with IT concepts and network terminologies.


Conventions

When using this guide, notice that features available in Easy Managed Switch may vary by model and software version. The availability of Easy Managed Switch may also vary by region or ISP. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience. Throughout the guide, we will take a specific model as the switch to be configured for example.

Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <https://www.tp-link.com/business-networking/>.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any products.

In this Guide, the following conventions are used:

The symbol  stands for *Note*. Notes contain suggestions or references that help you make better use of your device.

Menu Name > Submenu Name > Tab page indicates the menu structure. **SYSTEM > System Info > System Summary** means the System Summary page under the System Info menu option that is located under the SYSTEM menu.

Bold font indicates a button, toolbar icon, menu or menu item.

More Information

- The latest software and documentations can be found at Download Center at <https://www.tp-link.com/support/download/?type=smb>.

- The Installation Guide (IG) can be found where you find this guide or inside the package of the switch.
- The authentication information can be found where you find this guide.
- Specifications can be found on the product page at <https://www.tp-link.com/business-networking/>.
- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com/business> to join TP-Link Community.
- Our Technical Support contact information can be found at the Contact Technical Support page at <https://www.tp-link.com/support/?type=smb>.

Part 1

Introduction

CHAPTERS

1. Product Overview
2. Logging Into the Switch

1 Product Overview

Easy Managed Switch is an ideal upgrade from Unmanaged Switch, designed for Small Office and Home Office networks. The switch supports the following features:

- Traffic monitoring: Traffic summary, port mirroring, loop prevention and cable test enable the administrator to monitor traffic of the network effectively.
- VLAN: MTU VLAN, Port-based VLAN and 802.1Q VLAN can restrict broadcast domain, enhance network security and help manage devices easily.
- QoS: Port-based QoS, 802.1P-based QoS and DSCP/802.1P based QoS optimize traffic on your business network, and keep latency-sensitive traffic moving smoothly. Rate limit helps distribute and utilize network bandwidth reasonably. Storm control helps avoid network broadcast storm.
- PoE: PoE (Power over Ethernet) is a remote power supply function. With this function, the switch can supply power to the connected devices over twisted-pair cables.

 **Note:**


- The PoE Config is only available on Easy Managed Switches with PoE ports. For other non-PoE Easy Managed Switches, this feature is not supported.
-

2 Logging Into the Switch

To configure your switch through a web browser on your PC, follow these steps:


- 1) Connect your switch to the network and connect your PC to the switch.
- 2) Find out the IP address of the switch.
 - By default, the switch receives an IP address from a DHCP server (or a router that functions as a DHCP server) in your network. You can find out this IP address on the DHCP server.
 - If the switch cannot receive an IP address from a DHCP server, it uses the static IP address of 192.168.0.1, with a subnet mask of 255.255.255.0.
- 3) Configure IP address on your PC to make sure the switch and PC are in the same subnet.
 - If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.
 - If the switch uses the static IP address of **192.168.0.1**, configure your PC's IP address as **192.168.0.x** ("x" ranges from 2 to 254), and subnet mask as **255.255.255.0**.
- 4) Launch a web browser on your PC. The supported web browsers include, but are not limited to, the following types:
 - IE 8.0, 9.0, 10.0, 11.0
 - Firefox 26.0, 27.0
 - Chrome 32.0, 33.0
- 5) In the address bar of the web browser, enter the IP address of the switch. Here we suppose the switch uses the static IP address **192.168.0.1**.

Figure 2-1 Entering the IP Address of the Switch in the Browser



- 6) Enter the username and password in the pop-up login window. Enter **admin** for both username and password in lower case letters.

Figure 2-2 Logging Into the Switch

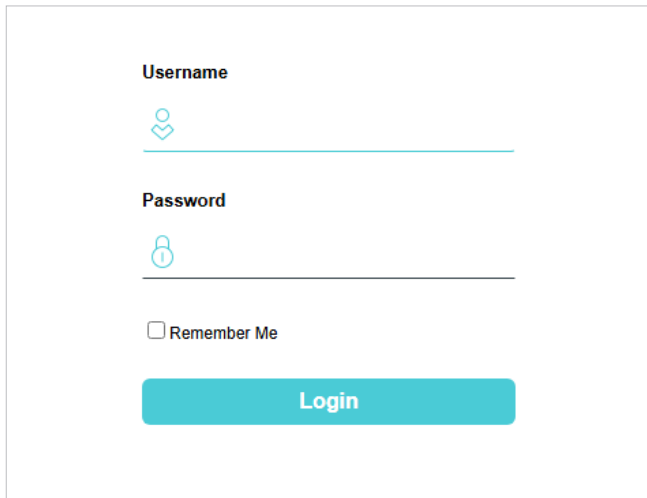


Note:

The first time you log in, you have to change the password to better protect your network and devices.

- 7) The typical web interface displays below. You can view the running status of the switch and configure the switch on this interface.

Figure 2-3 Launching the Web Interface

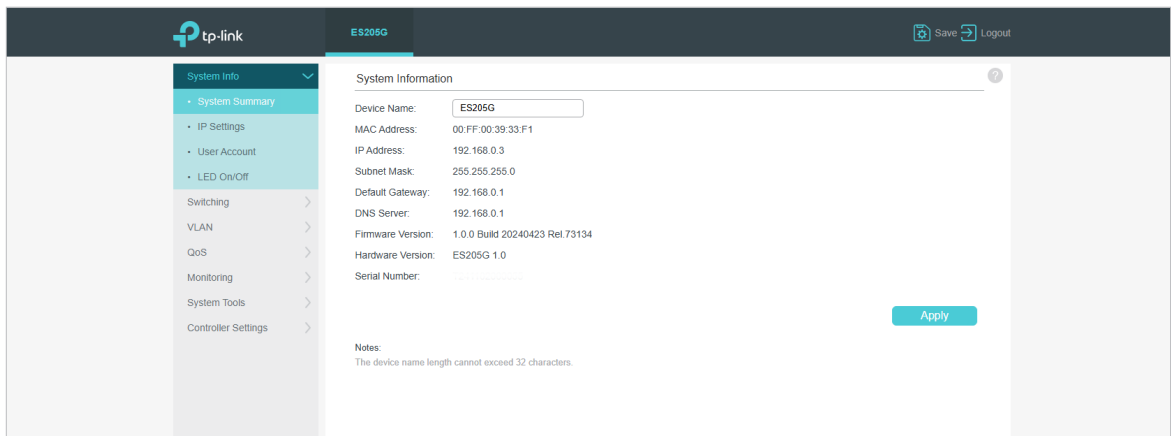

Note:

After applying the settings, you need to click on the upper right of the page to put the configuration into effect.

Part 2

Managing System

CHAPTERS

1. System
2. Configuring System Summary
3. Configuring IP
4. Configuring LED
5. Configuring User Account
6. Appendix: Default Parameters

1 System

1.1 Overview

In System Info module, you can view the system information and configure the system parameters and features of the switch.

1.2 Supported Features

System Summary

System Summary is mainly used to view the system information and configure the device name.

IP Settings

Each device in the network possesses a unique IP address. You can access the switch using IP address of the switch. You can set IP address of the switch manually or using DHCP.

User Account

User Account is mainly used to modify the administrator's username and password in order to refuse illegal users.

LED On/Off

LED On/Off config is used to turn on or off the LED on the switch.

2 System Summary


With System Summary, you can:

- View the system information
- Specify the device name

2.1 Viewing the System Information

Choose the menu **System Info > System Summary** to load the following page. You can view the basic system information of the switch.

Figure 2-1 Viewing the System Summary

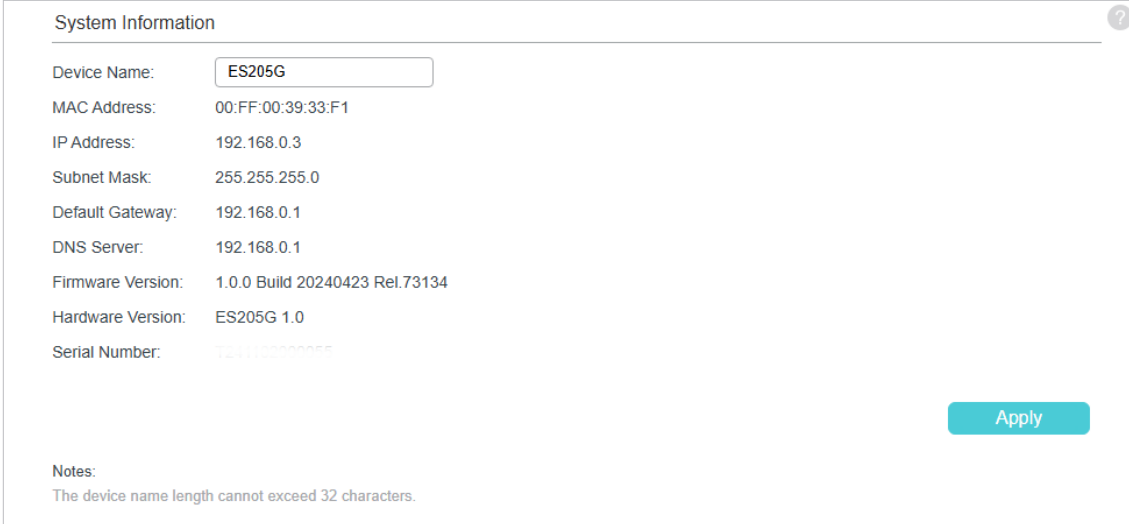

System Information	
Device Name:	ES205G
MAC Address:	00:FF:00:39:33:F1
IP Address:	192.168.0.3
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.0.1
DNS Server:	192.168.0.1
Firmware Version:	1.0.0 Build 20240423 Rel.73134
Hardware Version:	ES205G 1.0
Serial Number:	T2111032000055

Apply

Notes:
The device name length cannot exceed 32 characters.


Note:

- The Serial Number of the switch can be used to add the device to the Omada Cloud-Based Controller.

2.2 Specifying the Device Name

Choose the menu **System Info > System Summary** to load the following page. Specify a new device name for the switch, and click **Apply**.

Figure 2-2 Specifying the Device Name

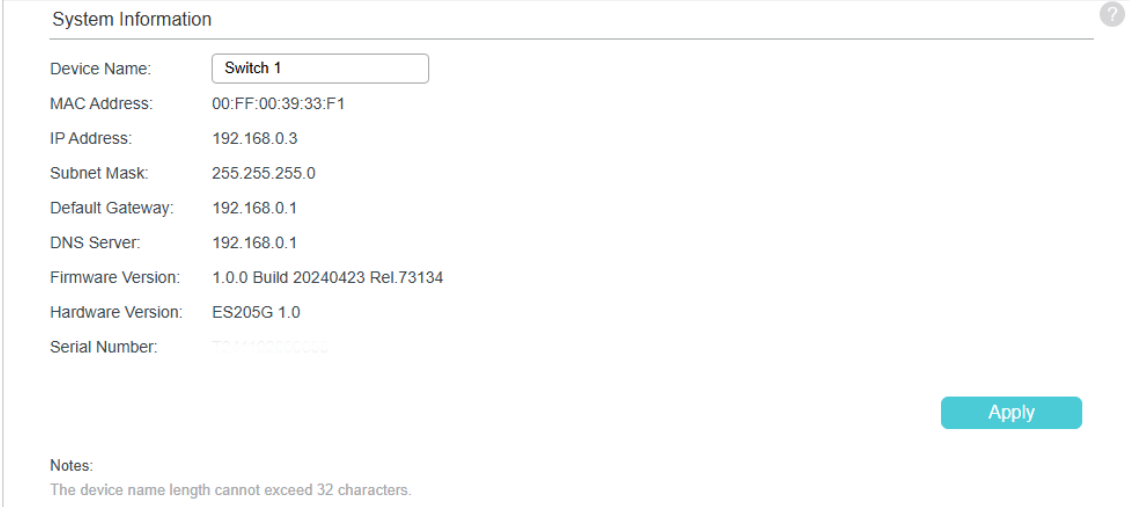

The screenshot displays the 'System Information' page. At the top left is the title 'System Information' with a help icon (question mark) to its right. Below the title, the 'Device Name' field is highlighted with a light blue border and contains the text 'Switch 1'. Other fields are listed in a table-like format:

Device Name:	Switch 1
MAC Address:	00:FF:00:39:33:F1
IP Address:	192.168.0.3
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.0.1
DNS Server:	192.168.0.1
Firmware Version:	1.0.0 Build 20240423 Rel.73134
Hardware Version:	ES205G 1.0
Serial Number:	7B11100000000

At the bottom right of the form is a teal 'Apply' button. Below the form, there is a 'Notes' section with the text: 'The device name length cannot exceed 32 characters.'

3 Configuring IP

You can configure the system IP address in the following two ways:

- Configure the System IP Address Using DHCP
- Configure the System IP Address Manually

Configuring the System IP Address Using DHCP

Choose the menu **System Info > IP Settings** to load the following page.

Figure 3-1 Configuring System IP Address Using DHCP



The screenshot shows the 'IP Settings' configuration page. It features a title bar with a question mark icon. Below the title bar, there are several configuration fields: 'DHCP Settings' is a dropdown menu set to 'Enable'; 'IP Address' is a text input field containing '192.168.0.1'; 'Subnet Mask' is a text input field containing '255.255.255.0'; 'Default Gateway' is a text input field containing '0.0.0.0'; 'Auto DNS' is a dropdown menu set to 'Enable'; and 'DNS Server' is a text input field containing '0.0.0.0'. An 'Apply' button is located at the bottom right of the form.


Follow these steps to configure the system IP address using DHCP:

- 1) Select DHCP Settings as **Enable** from the drop-down list.
- 2) Configure Auto DNS.
 - a) Select Auto DNS as **Enable** from the drop-down list. The switch will obtain the DNS server's IP address from the DHCP Server.
 - b) Select Auto DNS as **Disable** from the drop-down list. You can specify the DNS server's IP address of the switch.
- 3) Click **Apply**. The switch will obtain IP settings from the DHCP server.

Configuring the System IP Address Manually

Choose the menu **System Info > IP Settings** to load the following page.

Figure 3-2 Configuring System IP Address Manually

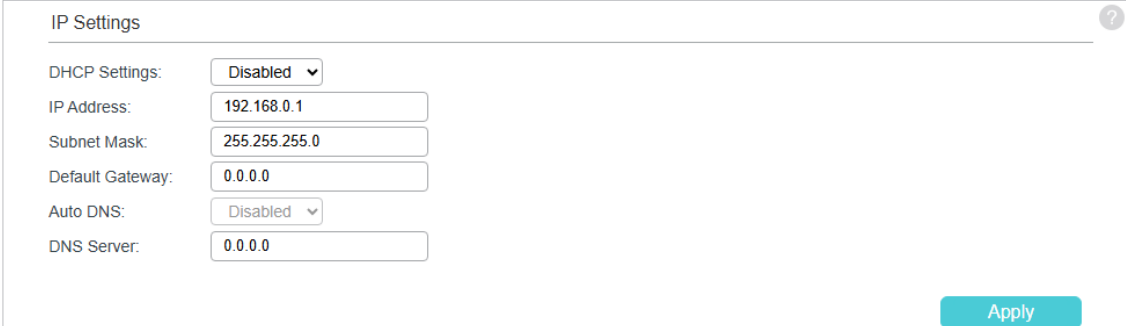

The screenshot shows the 'IP Settings' configuration page. It features a title bar with a question mark icon. Below the title bar, there are several configuration fields: 'DHCP Settings' is a dropdown menu set to 'Disabled'; 'IP Address' is a text input field containing '192.168.0.1'; 'Subnet Mask' is a text input field containing '255.255.255.0'; 'Default Gateway' is a text input field containing '0.0.0.0'; 'Auto DNS' is a dropdown menu set to 'Disabled'; and 'DNS Server' is a text input field containing '0.0.0.0'. An 'Apply' button is located at the bottom right of the form.

Follow these steps to configure the system IP address manually:

- 1) Select DHCP Settings as **Disable** from the drop-down list.
- 2) Specify the IP address, subnet mask, default gateway and DNS server.

IP Address	Specify the system IP of the switch. You can use this IP address to access the switch.
Subnet Mask	Specify the subnet mask of the switch.
Default Gateway	Specify the default gateway of the switch.
DNS Server	Specify the DNS server's IP address of the switch.

- 3) Click **Apply**.

4 Configuring User Account

With User Account, you can modify the administrator’s username and password in order to refuse illegal users.

Choose the menu **System Info > User Account** to load the following page.

Figure 4-1 Configuring User Account

The screenshot shows a web interface for 'User Account Setting'. It includes a title bar with a question mark icon. Below the title are four input fields: 'New Username' (containing 'admin'), 'Current Password', 'New Password', and 'Confirm Password'. To the right of these fields is a teal 'Apply' button. At the bottom left, there is a 'Notes' section with two numbered instructions: '1. New Username should contain 1-32 characters. No spaces are allowed.' and '2. New Password should contain 6-32 characters. No spaces are allowed.'

Follow these steps to configure the user account:

- 1) Specify the new username, enter the current password, specify a new password and confirm the new password.

New Username	Create a user name for login. Requirement for the user name varies among different devices. If your user name fails to meet the requirement, check the prompt information.
Current Password	Enter the current password of the switch. By default, the password is admin .
New Password	Specify a new password for login. Requirement for the password varies among different devices. If your password fails to meet the requirement, check the prompt information.
Confirm Password	Retype the new password.


- 2) Click **Apply**.

5 Configuring LED

With this function, you can turn on or turn off the LED with one click.

Choose the menu **System Info > LED On/Off** to load the following page. Choose the LED status and click **Apply**.

Figure 5-1 Configuring LED On/Off



The screenshot shows a web interface for configuring the LED. At the top, it says "LED On/Off Config". Below this, there is a label "LED:" followed by two radio button options: "On" (which is selected) and "Off". In the bottom right corner, there is a teal "Apply" button.

6 Appendix: Default Parameters

Default setting of System Summary is listed in the following table.

Table 6-1 Default Setting of System Summary

Parameter	Default Setting
Device Name	The model name of the switch.

Default settings of IP Settings are listed in the following table.

Table 6-2 Default Settings of IP Settings

Parameter	Default Setting
DHCP Setting	Enable
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
Auto DNS	Enable
DNS Server	0.0.0.0

Default setting of User Account is listed in the following table.

Table 6-3 Default Setting of User Account

Parameter	Default Setting
New Username	admin

Part 3

Switching

CHAPTERS

1. Switching
2. Configuring Ports
3. Configuring IGMP Snooping
4. Configuring LAG
5. Configuration Examples
6. Appendix: Default Parameters

1 Switching

1.1 Overview

With the switching feature, you can configure Port Settings, IGMP Snooping and LAG.

1.2 Supported Features

The switch supports the following features about switching:

Port Settings

You can configure port state, speed, duplex mode and flow control for ports.

IGMP Snooping


In a point-to-multipoint network, packets can be sent in three ways: unicast, broadcast and multicast. With unicast, many copies of the same information will be sent to all the receivers, occupying a large bandwidth.

With broadcast, information will be sent to all users in the network no matter they need it or not, wasting network resources and impacting information security.

Multicast, however, solves all the problems caused by unicast and broadcast. With multicast, the source only needs to send one piece of information, and all and only the users who need the information will receive copies of the information. In a point-to-multipoint network, multicast technology not only transmits data with high efficiency, but also saves a large bandwidth and reduces network load.

When IGMP Snooping is disabled on the switch, multicast packets will be broadcast in the Layer 2 network; when IGMP Snooping is enabled on the switch, multicast data from a known multicast group will be transmitted to the designated receivers instead of being broadcast in the Layer2 network. The following figure shows how IGMP snooping works.

Figure 1-1 IGMP Snooping

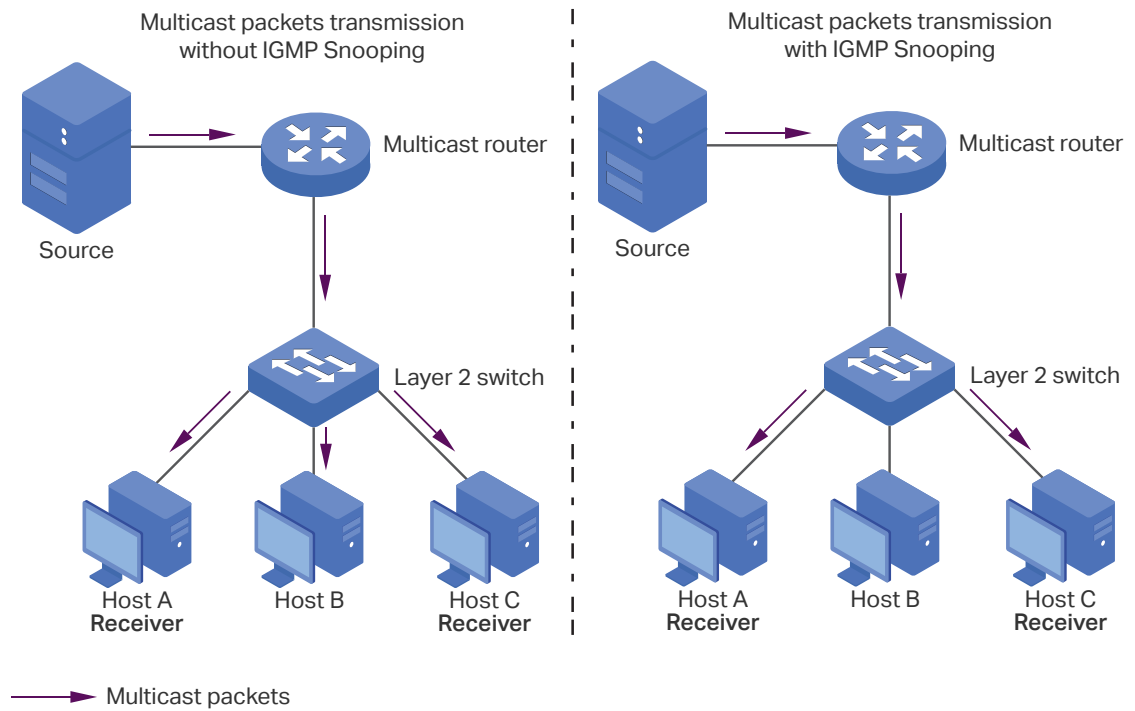

LAG

With LAG (Link Aggregation Group) function, you can aggregate multiple physical ports into a logical interface to increase link bandwidth and enhance the connection reliability.

2 Configuring Ports

Choose the menu **Switching > Port Settings** to load the following page.

Figure 2-1 Configuring Ports

Port Configuration ?

Port	State	Speed	Duplex	Flow Control
<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;"> Port 1 Port 2 Port 3 Port 4 Port 5 </div>	<input type="text" value="v"/>	<input type="text" value="v"/>	<input type="text" value="v"/>	<input type="text" value="v"/>

Apply

Port	State		Speed		Duplex		Flow Control	
	Configuration	Actual	Configuration	Actual	Configuration	Actual	Configuration	Actual
Port 1	Enabled	Disabled	Auto	Link Down	Auto	Link Down	Off	Off
Port 2	Enabled	Disabled	Auto	Link Down	Auto	Link Down	Off	Off
Port 3	Enabled	Disabled	Auto	Link Down	Auto	Link Down	Off	Off
Port 4	Enabled	Disabled	Auto	Link Down	Auto	Link Down	Off	Off
Port 5	Enabled	Enabled	Auto	1000M	Auto	Full	Off	Off

Notes:
 When rate/duplex of a port is set to auto/1000M, full duplex and its actual mode is 1000M full duplex/100M full duplex/10M full duplex, the flow control function can be enabled and take effect .

Follow these steps to configure the port parameters.

- 1) Select the desired ports and set basic parameters for the ports.

State	Enable or disable the port. When Enable is selected, the port can forward the packets normally.
Speed	Select the speed mode for the port. You can select Auto or manually specify the speed mode. When Auto is selected, the speed mode will be automatically determined by auto-negotiation. The device connected to the port should be in the same speed mode as the port.
Duplex	Select the duplex mode for the port. You can select Auto or manually specify the duplex mode. When Auto is selected, the duplex mode will be automatically determined by auto-negotiation. The device connected to the port should be in the same duplex mode as the port.
Flow Control	Select On or Off to enable or disable the Flow Control feature. When On is selected, the switch can synchronize the speed with its peer to avoid the packet loss caused by congestion.

- 2) Click **Apply**.

 **Note:**

- It is recommended to set the ports on both ends of a link with the same speed and duplex mode.
 - Keep the port that is connected to the management device enabled, or you cannot access the switch.
 - The parameters of the port members in a LAG should be set as the same.
-

3 Configuring IGMP Snooping

Choose the menu **Switching > IGMP Snooping** to load the following page.

Figure 3-1 Configuring IGMP Snooping

IGMP Snooping

IGMP Snooping: Enable Disable

IGMP Fast-leave: Enable Disable

IGMP Report Suppression: Enable Disable

Apply

IP address	VLAN ID	Port
------------	---------	------

Follow these steps to configure IGMP Snooping.

- 1) Enable IGMP Snooping. Enable or disable report message suppression according to your needs. Click **Apply**.

IGMP Snooping	Enable or disable IGMP Snooping globally.
IGMP Fast-leave	Enable or disable Fast Leave globally.
IGMP Report Suppression	Enable or disable Report Message Suppression function globally. If this function is enabled, the first Report Message from the listener will forward to the router ports while the subsequent Report Message will be suppressed to reduce the IGMP packets.


- 2) In the table below, you can view the current IGMP group information.

IP Address	Displays the IP address of the multicast group.
VLAN ID	Displays the VLAN ID of the multicast group. All port members of a multicast group should be included in the same VLAN.
Port	Displays the forwarding port list of the multicast group.

4 Configuring LAG

Choose the menu **Switching > LAG** to load the following page.

Figure 4-1 Configuring LAG

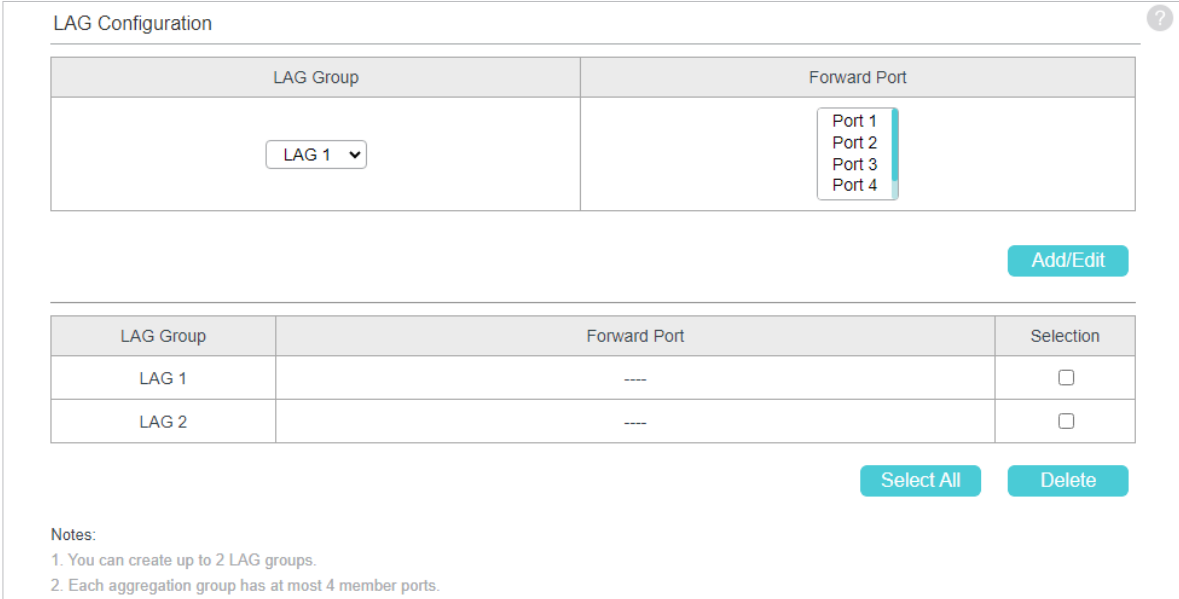

LAG Configuration

LAG Group	Forward Port
LAG 1	Port 1 Port 2 Port 3 Port 4

Add/Edit

LAG Group	Forward Port	Selection
LAG 1	---	<input type="checkbox"/>
LAG 2	---	<input type="checkbox"/>

Select All Delete

Notes:

1. You can create up to 2 LAG groups.
2. Each aggregation group has at most 4 member ports.

Follow these steps to configure LAG:

- 1) Select the desired LAG group from the drop-down list.
- 2) Click the ports to add to the LAG group. Click **Apply**.
- 3) In the table below, you can verify the LAG configuration result. You can select the LAG and click **Delete** to delete ports from the LAG group.

LAG Group	Displays the group number of the LAG Group.
Forward Port	Displays the LAG Group member ports.
Selection	Select the LAG Group.

Note:

- It is recommended to configure the LAG function before configuring the other functions for the member ports.
- Ensure that devices on both ends of the aggregation link use the same number of physical ports with the same speed and duplex mode, flow control setting and QoS setting.
- Mirroring and mirrored ports cannot be added to an LAG group.
- The maximum of LAG groups varies among different devices. To check the maximum of LAG groups, refer to the actual web interface.
- Each LAG group has 1 port members at least and 4 port members at most.

5 Configuration Examples


5.1 Example for Configuring IGMP Snooping

5.1.1 Network Requirements

Host B, Host C and Host D are in the same VLAN of the switch. All of them want to receive multicast streams sent to the same multicast group.

As shown in the following topology, Host B, Host C and Host D are connected to port 1, port 2 and port 3 respectively. Port 4 is the router port connected to the multicast querier.

Figure 5-1 Network Topology for Basic IGMP Snooping

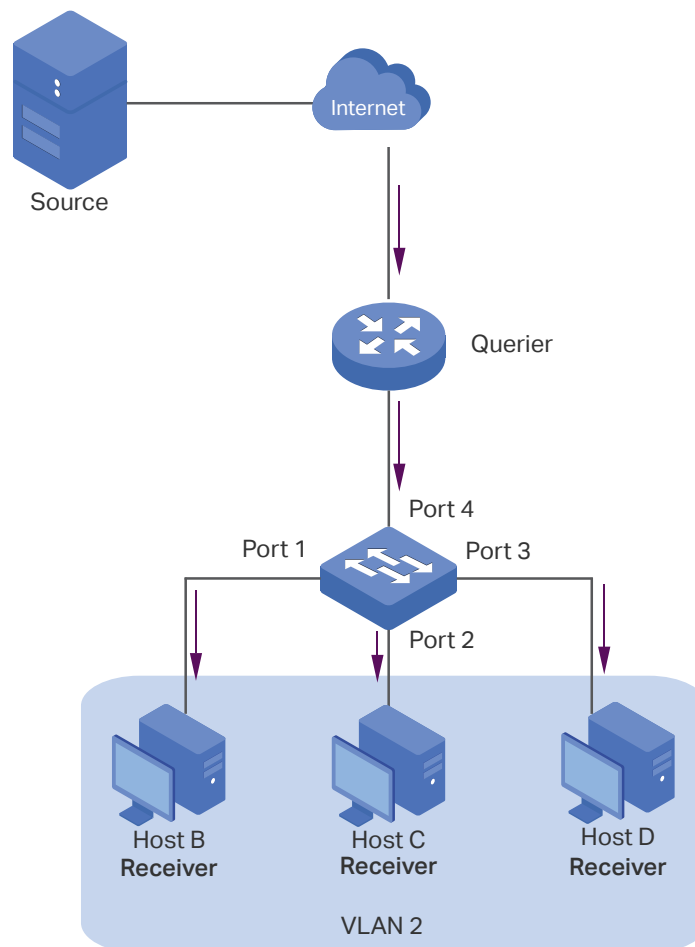

5.1.2 Configuration Scheme

- Configure 802.1Q VLAN. Add the three member ports and the router port to the same VLAN.
- Enable IGMP Snooping.

Demonstrated with a specific model, the following section provides configuration steps.

5.1.3 Configuration Steps

- 1) Choose the menu **VLAN > 802.1Q VLAN > VLAN Config** to load the following page. Select the 802.1Q VLAN Configuration as **Enable**. Click **Apply**. Specify the VLAN ID as **2**. Specify the VLAN name as **VLAN2**. Select port 1, port 2, port 3 as untagged ports. Select port 4 as a tagged port. Click **Add/Edit**.

Figure 5-2 Configuring 802.1Q VLAN

VLAN Config | Port Config | Management VLAN

VLAN Config

802.1Q VLAN enabled: Enable Disable

VLAN ID <input type="text" value="2"/> (1-4094)	VLAN Name <input type="text" value="VLAN 2"/>	<input type="button" value="Add/Edit"/>	<input type="button" value="Delete"/>
Port	Untagged port	Tagged port	Non-member port
Select All	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Port 5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

VLAN ID	VLAN Name	Member Ports	Tagged ports	Untagged ports
1		1-5	-	1-5

- 2) Choose the menu **VLAN > 802.1Q VLAN > Port Config** to load the following page. Select port 1, port 2, port 3 and port 4, and specify the PVID as 2 for the ports. Click **Apply**.

Figure 5-3 Configuring 802.1Q PVID

Port Config

802.1Q VLAN enabled: Enable Disable Apply

802.1Q Port Settings

Port	PVID	Ingress Checking
<div style="border: 1px solid red; padding: 2px;"> Port 1 Port 2 Port 3 Port 4 </div>	<div style="border: 1px solid red; padding: 2px;"> 2 </div>	<input type="text"/>

Apply

Port	PVID	Ingress Checking
Port 1	1	Enabled
Port 2	1	Enabled
Port 3	1	Enabled
Port 4	1	Enabled
Port 5	1	Enabled

- 3) Choose the menu **Switching > IGMP Snooping** to load the following page. Enable IGMP snooping. Click **Apply**.

Figure 5-4 Configuring IGMP Snooping

IGMP Snooping

IGMP Snooping: Enable Disable

IGMP Fast-leave: Enable Disable

IGMP Report Suppression: Enable Disable

Apply


IP address	VLAN ID	Port
------------	---------	------

5.2 Example for Configuring LAG

5.2.1 Network Requirements

As shown below, hosts and servers are connected to Switch A and Switch B, and heavy traffic is transmitted between the two switches. To achieve high speed and reliability of data transmission, you can bundle multiple physical ports into one logical interface. In this case, we bundle port 1, port 2 and port 3 of both switches into one logical interface.

Figure 5-5 Network Topology for LAG

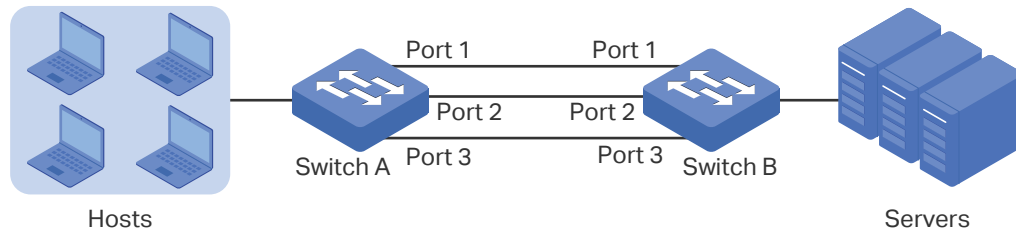

Demonstrated with a specific model, the following section provides configuration steps. The configuration steps are similar for both switches, here we take Switch A for example.

5.2.2 Configuration Steps

Choose the menu **Switching > LAG** to load the following page. Add Port 1, Port 2 and Port 3 to LAG 1. Click **Add/Edit**.

Figure 5-6 Configuring LAG

LAG Configuration

LAG Group	Forward Port
LAG 1	Port 1 Port 2 Port 3 Port 4

Add/Edit

LAG Group	Forward Port	Selection
LAG 1	1,2,3	<input type="checkbox"/>
LAG 2	---	<input type="checkbox"/>

Select All **Delete**

6 Appendix: Default Parameters

Default settings of Port are listed in the following table.

Table 6-1 Default Settings of Port Configuration

Parameter	Default Setting
State	Enabled
Speed	Auto
Duplex	Auto
Flow Control	Off

Default settings of IGMP Snooping are listed in the following table.

Table 6-2 Default Settings of IGMP Snooping Configuration

Parameter	Default Setting
IGMP Snooping	Enable
IGMP Fast-leave	Disable
IGMP Report Suppression	Disable

Default settings of LAG are listed in the following table.

Table 6-3 Default Settings of LAG Configuration

Parameter	Default Setting
LAG Group	LAG 1

Part 4

Configuring VLAN

CHAPTERS

1. Overview
2. Configuring MTU VLAN
3. Configuring Port-Based VLAN
4. Configuring 802.1Q VLAN
5. Configuration Example for 802.1Q VLAN
6. Appendix: Default Parameters

1 Overview

VLAN (Virtual Local Area Network) is a network technique that solves broadcasting issues in local area networks. It is usually applied in the following occasions:

- To restrict broadcast domain: VLAN technique divides a big local area network into several VLANs, and all VLAN traffic remains within its VLAN. It reduces the influence of broadcast traffic in Layer 2 network to the whole network.
- To enhance network security: Devices from different VLANs cannot achieve Layer 2 communication, and thus users can group and isolate devices to enhance network security.
- To facilitate management: VLANs group devices logically instead of physically, so devices in the same VLAN need not be located in the same place. It eases the management of devices in the same work group but located in different places.

There are 3 types of VLAN modes supported on the switch:

- MTU VLAN

MTU VLAN (Multi-Tenant Unit VLAN) defines an uplink port which will build up several VLANs with each of the other ports. Each VLAN contains two ports, the uplink port and one of the other ports in the switch, so the device connected to the uplink port can communicate with the device connected to any other port, but devices connected to other ports cannot communicate with each other.


- Port-Based VLAN

VLANs are divided based on ports. In port based VLAN mode, each port can only be added to one VLAN.

- 802.1Q VLAN

The IEEE 802.1Q protocol defines a new format of VLAN data frame (Tagged Frame). As the following figure shows, compared to the traditional Ethernet data frame (Untagged Frame), the VLAN data frame (Tagged Frame) adds a VLAN tag.

Figure 1-1 Untagged and Tagged Data Frame

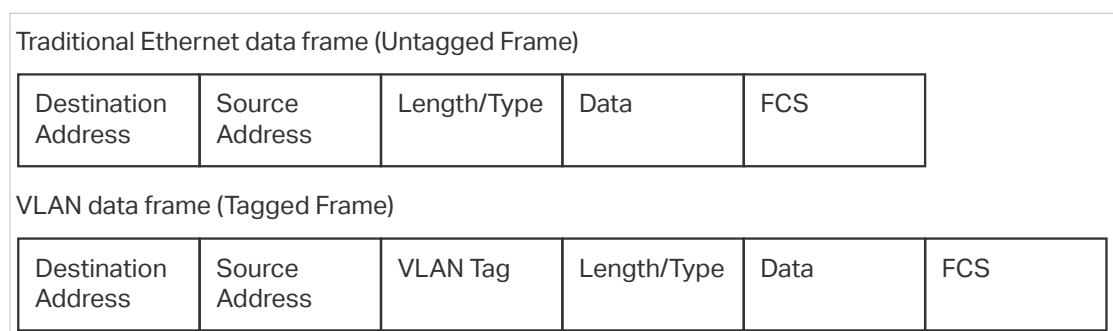

On receiving a tagged frame, the switch checks the VID (VLAN ID) contained in the VLAN tag to determine which VLAN the frame belongs to. On receiving an untagged frame, the

switch will first insert a VLAN tag to the frame, using the PVID (Port VLAN ID) of the port as its VID, and then forward it as a tagged frame.

 **Note:**

- The switch works in one and only one VLAN mode at any time. When a specific VLAN mode is enabled, the other two VLAN modes will be disabled automatically and the corresponding VLAN configuration will be lost.
 - The switch supports up to 32 VLANs simultaneously.
-

2 Configuring MTU VLAN

Choose the menu **VLAN > MTU VLAN** to load the following page.

Figure 2-1 Configuring MTU VLAN

Follow these steps to configure MTU VLAN:

- 1) Select MTU VLAN configuration as **Enable**. Click **Apply**.

MTU VLAN enabled:	Check the box to enable/disable the MTU VLAN mode.
--------------------------	--

- 2) In the table below, change the uplink port from the list according to your needs. Click **Apply**.

Current Uplink Port	Current Uplink Port of the MTU VLAN.
Select Uplink Port	Select the desired uplink port(s) from the list. The uplink port will build up several VLANs with each of the other ports.

3 Configuring Port-Based VLAN

Choose the menu **VLAN > Port-based VLAN** to load the following page.

Figure 3-1 Configuring Port-based VLAN

Port-Based VLAN Settings ?

Port-Based VLAN enabled: Enable Disable **Apply**

VLAN	<input type="text" value=""/> (1-5, maximum configurable number: 5)				
Port	1	2	3	4	5
Member	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply **Delete**

VLAN	Member Ports
1	1-5

Follow these step to configure port-based VLAN:

- 1) Select the port-based VLAN configuration as **Enable**. Click **Apply**.

Port-based VLAN enabled	Check the box to enable/disable the Port-based VLAN.
--------------------------------	--

- 2) Enter the VLAN ID and select ports to be added to the VLAN. Click **Apply**. To delete the VLAN created, enter the corresponding VLAN ID and click **Delete**.

VLAN	Enter the ID number of VLAN. It ranges from 1 to 32.
Port	Displays the port number.
Member	Click the checkbox to choose one or multiple member ports of the current VLAN. If this field is checked, it indicates the port belongs to the current VLAN.

- 3) In the table below, you can verify the configuration result of the port-based VLAN.

VLAN	Displays the ID number of VLAN.
Member Ports	Displays the member ports in the VLAN.

Note:

- By default, all the ports are added to VLAN 1.
- Once a port is added to another VLAN, it is deleted from the original VLAN automatically.
- Once a port is removed from all the other VLANs, it is added to VLAN 1 automatically.
- VLAN 1 includes at least one port and cannot be deleted.

4 Configuring 802.1Q VLAN

To complete the 802.1Q configuration, follow these steps:

- 1) Configure the VLAN, including creating a VLAN and adding the ports to the VLAN.
- 2) Configure the PVID.
- 3) Configure the management VLAN.

4.1 Configuring the VLAN

Choose the menu **VLAN > 802.1Q VLAN > VLAN Config** to load the following page.

Figure 4-1 Configuring 802.1Q VLAN

The screenshot shows the 'VLAN Config' page with three tabs: 'VLAN Config' (selected), 'Port Config', and 'Management VLAN'. Below the tabs, there is a section for '802.1Q VLAN enabled' with radio buttons for 'Enable' (selected) and 'Disable', and an 'Apply' button. Below this is a table for adding or editing VLANs. The table has columns for 'VLAN ID (1-4094)', 'VLAN Name', 'Add/Edit', and 'Delete'. Below the table is a summary table showing the configuration for VLAN 1.

VLAN ID	VLAN Name	Member Ports	Tagged ports	Untagged ports
1		1-5	-	1-5

Follow these steps to configure the VLAN:

- 1) Select the 802.1Q VLAN configuration as **Enable**. Click **Apply**.

802.1Q VLAN enabled Check the box to enable/disable the 802.1Q VLAN.

- 2) Enter a VLAN ID and a VLAN name to identify the VLAN. Select the untagged port(s) and the tagged port(s) respectively to be added to the created VLAN based on the network topology. Click **Add/Edit**. To delete the VLAN created, enter the corresponding VLAN ID and click **Delete**.

VLAN ID Enter a VLAN ID, which ranges from 1 to 4094.

VLAN Name	Enter a VLAN name to identify the VLAN. The VLAN name only allows numbers, letters and underscores, and should not exceed 10 characters in length.
Untagged / Tagged / Non-member port	<p>Set the port as an untagged port, a tagged port or a non-member port in the VLAN.</p> <p>Untagged port: Click the checkbox to configure the egress rule of the traffic on this port as untagged. The switch drops the tag header before sending the packet.</p> <p>Tagged port: Click the checkbox to configure the egress rule of the traffic on this port as tagged. The switch adds the tag header before sending the packet.</p> <p>Non-member port: Click the checkbox to exclude the port from the current VLAN.</p>

3) In the table below, you can verify the configuration result of the 802.1Q VLAN.

VLAN ID	Displays the ID number of VLAN.
VLAN Name	Displays the user-defined description of the VLAN.
Member Ports	Displays the member ports in the VLAN.
Tagged Ports	Displays the tagged member ports in the VLAN.
Untagged Ports	Displays the untagged member ports in the VLAN.

 **Note:**

- By default, all the ports are added to VLAN 1.
- The port can be removed from VLAN 1 only when the port is also a member of the other VLANs.
- Once a port is removed from all the current VLANs, it is added to VLAN 1 automatically.
- VLAN 1 cannot be deleted.

4.2 Configuring the PVID

Choose the menu **VLAN > 802.1Q VLAN > Port Config** to load the following page.

Figure 4-2 Configuring 802.1Q PVID

Port Config

802.1Q VLAN enabled: Enable Disable Apply

802.1Q Port Settings

Port	PVID	Ingress Checking
<div style="border: 1px solid gray; padding: 2px;"> Port 1 Port 2 Port 3 Port 4 </div>	<input type="text"/>	<input type="text" value="▼"/>
Port 1	1	Enabled
Port 2	1	Enabled
Port 3	1	Enabled
Port 4	1	Enabled
Port 5	1	Enabled

Apply

Follow these steps to configure the PVID:

- 1) Select the ports, set the PVID for the ports, and choose from the drop-down list to enable or disable Ingress Checking.

PVID	Enter the default VLAN ID for the port. It can be added to the untagged packets as VLAN ID, and then the port will forward the packets in the corresponding VLAN.
Ingress Checking	Enable or disable Ingress Checking. With this function enabled, the port will accept the packet of which the VLAN ID is in the port's VLAN list and discard others. With this function disabled, the port will forward the packet directly.

- 2) Click **Apply**.

Note:

- The PVID configuration will take effect only when 802.1Q VLAN mode is enabled.
- You can specify a PVID only when the corresponding VLAN exists.

4.3 Configuring Management VLAN

Choose the menu **VLAN > 802.1Q VLAN > Management VLAN** to load the following page.

Figure 4-3 Configuring Management VLAN

Current Management VLAN ID
1

Follow these steps to configure the management VLAN:

- 1) Specify the management VLAN ID.

Management VLAN ID

Configure specific management VLANs, which should be within the range the configured 802.1Q VLANs. After configuration, only PCs with management VLAN tags can access to the management interface. Multiple management VLAN IDs can be configured.

- 2) Click **Apply**.

Note:

- Only the computer in this VLAN can access the management interface of the switch.
- By default, the management VLAN ID is 1.

5 Configuration Example for 802.1Q VLAN


5.1 Network Requirements

As the following figure shows, a company has two departments. Hosts of the same department are located in different places and connected to different switches respectively.

Requirements:

- Hosts of both departments can access the internet.
- Hosts of the same department can communicate with each other, but hosts of different departments cannot.

Figure 5-1 Network Topology

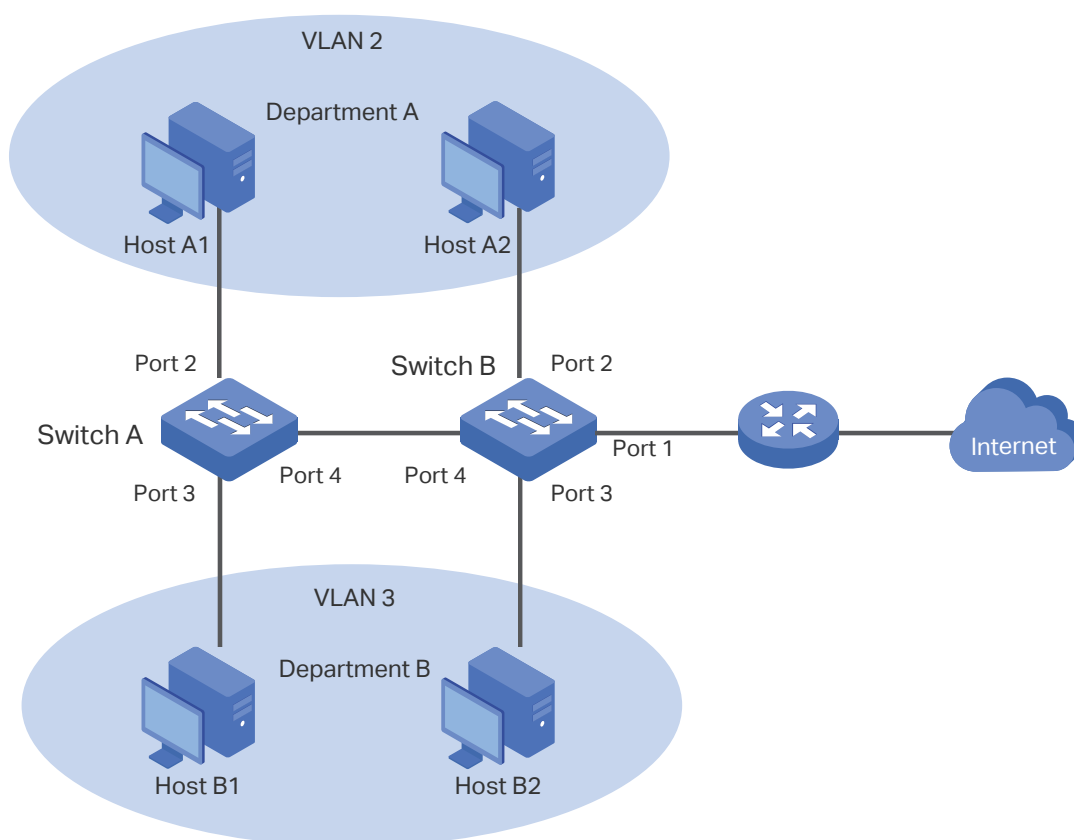

5.2 Configuration Scheme

To implement the above requirements, configure 802.1Q VLAN on both switches.

- Create VLAN 2. On Switch A, add port 2 and port 4 to VLAN 2, while on Switch B, add port 1, port 2 and port 4 to VLAN 2.

- Create VLAN 3. On Switch A, add port 3 and port 4 of Switch A to VLAN 3, while on Switch B, add port 1, port 3 and port 4 to VLAN 3.
- Configure the default VLAN 1 to make sure the router can communicate with all ports of the two switches.

Table 5-1 and 5-2 show configurations of VLANs on each switch.

Table 5-1 Relationships of Ports and VLANs on Switch A and Switch B.

Switch	Ports in VLAN 1	Ports in VLAN 2	Ports in VLAN 3
Switch A	2, 3, 4	2, 4	3, 4
Switch B	1, 2, 3, 4	1, 2, 4	1, 3, 4

Table 5-2 Settings of Egress Rule and PVID on Switch A and Switch B

Switch	Port	Egress Rule	PVID
Switch A	2	Untagged	2
	3	Untagged	3
	4	Tagged	1
Switch B	1	Untagged	1
	2	Untagged	2
	3	Untagged	3
	4	Tagged	1

 **Note:**

If a port is connected to terminal devices like computers, add the port to the corresponding VLANs as an untagged port, because terminal devices typically do not support VLAN tags.

5.3 Configuration Steps

Demonstrated with a specific model, the following section provides configuration steps. The configuration steps on both switches are similar. Here we take Switch A for example.

- 1) Choose the menu **VLAN > 802.1Q VLAN > VLAN Config** to load the following page. Select 802.1Q VLAN configuration as **Enable**. Click **Apply**.

Figure 5-2 Configuring 802.1Q VLAN

The screenshot shows the 'VLAN Config' page with three tabs: 'VLAN Config', 'Port Config', and 'Management VLAN'. Under 'VLAN Config', there is a section for '802.1Q VLAN enabled:' with radio buttons for 'Enable' (selected) and 'Disable'. An 'Apply' button is highlighted with a red box. Below this is a table for configuring VLANs.

VLAN ID	VLAN Name	Add/Edit	Delete
(1-4094)			
Port	Untagged port	Tagged port	Non-member port
Select All	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Port 2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Port 3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Port 4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Port 5	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

VLAN ID	VLAN Name	Member Ports	Tagged ports	Untagged ports
1		1-5	-	1-5

- 2) Choose the menu **VLAN > 802.1Q VLAN > VLAN Config** to load the following page and create VLAN 2. Specify VLAN ID as **2**, add port 2 to the VLAN as an untagged port, and add port 4 to the VLAN as a tagged port. Click **Add/Edit**.

Figure 5-3 Creating VLAN 2 and Adding Ports to the VLAN

The screenshot shows the 'VLAN Config' page with the 'VLAN ID' field set to '2' and the 'VLAN Name' field set to 'VLAN2'. The 'Add/Edit' button is highlighted with a red box. The table below shows the configuration for VLAN 2.

VLAN ID	VLAN Name	Add/Edit	Delete
2	VLAN2		
Port	Untagged port	Tagged port	Non-member port
Select All	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Port 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Port 3	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Port 4	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Port 5	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>

- 3) Choose the menu **VLAN > 802.1Q VLAN > VLAN Config** to load the following page and create VLAN 3. Specify VLAN ID as **3**, add port 3 to the VLAN as an untagged port, and add port 4 to the VLAN as a tagged port. Click **Add/Edit**.

Figure 5-4 Creating VLAN 3 and Adding Ports to the VLAN

VLAN ID <input type="text" value="3"/> (1-4094)	VLAN Name <input type="text" value="VLAN3"/>	<input type="button" value="Add/Edit"/>	<input type="button" value="Delete"/>
Port	Untagged port	Tagged port	Non-member port
Select All	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 1	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Port 2	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Port 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Port 4	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Port 5	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>

- 4) Choose the menu **VLAN > 802.1Q VLAN > Port Config** to load the following page. Specify the PVID of port 2 as **2** and click **Apply**. Specify the PVID of port **3** as 3 and click **Apply**.

Figure 5-5 Configuring 802.1Q PVID

VLAN Config
Port Config
Management VLAN
?

Port Config

802.1Q VLAN enabled: Enable Disable

802.1Q Port Settings

Port	PVID	Ingress Checking
Port 1		
Port 2		
Port 3	<input type="text" value="3"/>	<input type="text" value="Enable"/>
Port 4		

Port	PVID	Ingress Checking
Port 1	1	Enabled
Port 2	2	Enabled
Port 3	3	Enabled
Port 4	1	Enabled
Port 5	1	Enabled

6 Appendix: Default Parameters

Default settings of VLAN are listed in the following tables.

Table 6-1 Default Settings of MTU VLAN Configuration

Parameter	Default Setting
MTU VLAN Configuration	Disable

Table 6-2 Default Settings of Port Based VLAN Configuration

Parameter	Default Setting
Port Based VLAN Configuration	Enable
VLAN ID	1
VLAN Member Port	1-5

Table 6-3 Default Settings of 802.1Q VLAN Configuration

Parameter	Default Setting
802.1Q VLAN Configuration	Disable

Table 6-4 Default Settings of 802.1Q VLAN PVID Configuration

Parameter	Default Setting
PVID	1

Table 6-5 Default Settings of 802.1Q VLAN Management VLAN Configuration

Parameter	Default Setting
Management VLAN ID	1

Part 5

Configuring QoS

CHAPTERS

1. QoS
2. Configuring Basic QoS
3. Configuring Rate Limit
4. Configuring Storm Control
5. Configuration Example for Basic QoS
6. Appendix: Default Parameters

1 QoS

1.1 Overview

With network scale expanding and applications developing, internet traffic is dramatically increased, thus resulting in network congestion, packet drops and long transmission delay. Typically, networks treat all traffic equally on FIFO (First In First Out) delivery basis, but nowadays many special applications like VoD, video conferences, VoIP, etc. require more bandwidth or shorter transmission delay to guarantee the performance.

With QoS (Quality of Service) technology, you can classify and prioritize network traffic to provide differentiated services for certain types of traffic.

1.2 Supported Features

With the QoS feature, You can configure QoS Basic, Rate Limit and Storm Control on the switch to maximize the network performance and bandwidth utilization.

QoS Basic

QoS (Quality of Service) function is used to optimize the network performance. It provides you with network service experience of a better quality. The switch implements three priority modes based on port, 802.1p and DSCP.

Rate Limit

With a limited bandwidth, you can control the traffic rate on each port to ensure network in working order.

Storm Control

Storm Control function allows the switch to monitor broadcast packets, multicast packets and UL-frames (Unknown unicast frames) in the network. If the transmission rate of the packets exceeds the limit, the packets will be automatically discarded to avoid network broadcast storm.

2 Configuring Basic QoS

Configuration Guidelines

Select the QoS mode according to your network requirements. Three QoS modes are supported on the switch: Port-based, 802.1p-based and DSCP-based.

- Port-Based

The Port Priority function can classify the packets based on the ports that the packets reach, then map them to different queues.

- Based on 802.1p

802.1p gives the Priority field in 802.1Q tag a recommended definition. The tagged packets are mapped to different priority levels based on 802.1Q tag.

- Based on DSCP

DSCP gives the IP DSCP field a recommended definition. The IP packets are mapped to different priority levels based on DSCP value.

2.1 Configuring QoS in Port-Based Mode

Choose the menu **QoS > QoS Basic** to load the following page.

Figure 2-1 Configuring Basic QoS in Port-Based Mode

The screenshot shows a configuration window titled "Global Configuration" with a help icon in the top right corner. Under the heading "QoS mode:", there are three radio button options: "Port-Based" (which is selected), "Based on 802.1p", and "Based on DSCP". A teal "Apply" button is located in the bottom right corner of the configuration area.

Follow these steps to configure QoS in port-based mode:

- 1) In the **Global Configuration** section, select QoS mode as **Port-Based**. Click **Apply**.

QoS Mode	Select the QoS mode.
-----------------	----------------------

- 2) In the **Based on Port Settings** section, specify the mapping from Port to Priority. Click **Apply**.

Figure 2-2 Configuring Based on Port Settings

The screenshot shows a configuration window titled "Based on Port Settings". It contains a table with three columns: "Choice", "Port", and "Priority". The "Choice" column has six checkboxes, all of which are currently unchecked. The "Port" column lists "Port 1" through "Port 5". The "Priority" column shows a dropdown menu for the first row (set to "0") and the number "0" for the subsequent rows. A teal "Apply" button is located in the bottom right corner.

Choice	Port	Priority
<input type="checkbox"/>		0 ▼
<input type="checkbox"/>	Port 1	0
<input type="checkbox"/>	Port 2	0
<input type="checkbox"/>	Port 3	0
<input type="checkbox"/>	Port 4	0
<input type="checkbox"/>	Port 5	0

Choice	Select the desired port for port priority configuration.
Port	Displays the physical port number of the switch.
Priority	Specify the priority for the port.

- 3) In the **Priority Queue Mapping** section, specify the mapping from Priority to Queue. Click **Apply**.

Figure 2-3 Configuring Priority Queue Mapping

Priority Queue Mapping

Choice	Priority	Queue
<input type="checkbox"/>		Q0 ▾
<input type="checkbox"/>	0	Q1
<input type="checkbox"/>	1	Q0
<input type="checkbox"/>	2	Q2
<input type="checkbox"/>	3	Q3
<input type="checkbox"/>	4	Q4
<input type="checkbox"/>	5	Q5
<input type="checkbox"/>	6	Q6
<input type="checkbox"/>	7	Q7

Apply

Choice Select the desired priority for queue configuration.

Priority Displays the priority number.

Queue Select the queue for the desired priority.

- 4) In the **Queue Weight Setting** section, specify the mapping from Queue to Weight. Click Apply.

Figure 2-4 Configuring Queue Weight Setting

Queue Weight Setting

Choice	Queue	Weight
<input type="checkbox"/>		<input style="width: 60px;" type="text"/>
<input type="checkbox"/>	Q0	1
<input type="checkbox"/>	Q1	1
<input type="checkbox"/>	Q2	1
<input type="checkbox"/>	Q3	1
<input type="checkbox"/>	Q4	1
<input type="checkbox"/>	Q5	1
<input type="checkbox"/>	Q6	1
<input type="checkbox"/>	Q7	1

Apply

Choice Select the desired queue for weight configuration.

Queue Displays the number of queue.

Weight Specify the queue weight for the desired queue.

2.2 Configuring QoS in 802.1p-Based Mode

Choose the menu **QoS > QoS Basic** to load the following page.

Figure 2-5 Configuring Basic QoS in 802.1p-Based Mode

Global Configuration

QoS mode: Port-Based Based on 802.1p Based on DSCP

Apply

Follow these steps to configure QoS based on 802.1p:

- 1) In the **Global Configuration** section, select QoS mode as **Based on 802.1p**. Click **Apply**.
- 2) In the **Priority Queue Mapping** section, specify the mapping from Priority to Queue. Click **Apply**.

Figure 2-6 Configuring Priority Queue Mapping

Priority Queue Mapping

Choice	Priority	Queue
<input type="checkbox"/>		Q0
<input type="checkbox"/>	0	Q1
<input type="checkbox"/>	1	Q0
<input type="checkbox"/>	2	Q2
<input type="checkbox"/>	3	Q3
<input type="checkbox"/>	4	Q4
<input type="checkbox"/>	5	Q5
<input type="checkbox"/>	6	Q6
<input type="checkbox"/>	7	Q7

Apply

- Choice** Select the desired priority for queue configuration.
- Priority** Displays the priority number.
- Queue** Select the queue for the desired 802.1p priority.

- 3) In the **Queue Weight Setting** section, specify the mapping from Queue to Weight. Click **Apply**.

Figure 2-7 Configuring Queue Weight Setting

Queue Weight Setting

Choice	Queue	Weight
<input type="checkbox"/>		<input style="width: 50px;" type="text"/>
<input type="checkbox"/>	Q0	1
<input type="checkbox"/>	Q1	1
<input type="checkbox"/>	Q2	1
<input type="checkbox"/>	Q3	1
<input type="checkbox"/>	Q4	1
<input type="checkbox"/>	Q5	1
<input type="checkbox"/>	Q6	1
<input type="checkbox"/>	Q7	1

- Choice Select the desired queue for weight configuration.
- Queue Displays the ID number of priority Queue.
- Weight Specify the queue weight for the desired queue.

2.3 Configuring QoS in DSCP-Based Mode

Choose the menu **QoS > QoS Basic** to load the following page.

Figure 2-8 Configuring Basic QoS in DSCP-Based Mode

Global Configuration ?

QoS mode: Port-Based Based on 802.1p Based on DSCP

Follow these steps to configure QoS based on DSCP:

- 1) In the **Global Configuration** section, select QoS mode as **Based on DSCP**. Click **Apply**.
- 2) In the **Based on DSCP Settings** section, specify the mapping from DSCP to Priority. Click **Apply**.

Figure 2-9 Configuring Based on DSCP Settings

Based on DSCP Settings

Choice	DSCP	Priority
<input type="checkbox"/>		0 ▾
<input type="checkbox"/>	0	0
<input type="checkbox"/>	1	0
<input type="checkbox"/>	2	0
<input type="checkbox"/>	3	0
<input type="checkbox"/>	4	0
<input type="checkbox"/>	5	0
<input type="checkbox"/>	6	0
<input type="checkbox"/>	7	0
<input type="checkbox"/>	8	1
<input type="checkbox"/>	9	1
<input type="checkbox"/>	10	1

[Apply](#)

Choice Select the desired DSCP values for priority configuration.

DSCP Displays the DSCP values.

Priority Select the priority for the desired DSCP values.

- 3) In the **Priority Queue Mapping** section, specify the mapping from Priority to Queue. Click **Apply**.

Figure 2-10 Configuring Priority Queue Mapping

Priority Queue Mapping

Choice	Priority	Queue
<input type="checkbox"/>		Q0 ▾
<input type="checkbox"/>	0	Q1
<input type="checkbox"/>	1	Q0
<input type="checkbox"/>	2	Q2
<input type="checkbox"/>	3	Q3
<input type="checkbox"/>	4	Q4
<input type="checkbox"/>	5	Q5
<input type="checkbox"/>	6	Q6
<input type="checkbox"/>	7	Q7

[Apply](#)

Choice Select the desired priority for queue configuration.

Priority Displays the priority number.

Queue Select the queue for the desired priority.

- 4) In the **Queue Weight Setting** section, specify the mapping from Queue to Weight. Click Apply.

Figure 2-11 Configuring Queue Weight Setting

Queue Weight Setting

Choice	Queue	Weight
<input type="checkbox"/>		<input style="width: 50px;" type="text"/>
<input type="checkbox"/>	Q0	1
<input type="checkbox"/>	Q1	1
<input type="checkbox"/>	Q2	1
<input type="checkbox"/>	Q3	1
<input type="checkbox"/>	Q4	1
<input type="checkbox"/>	Q5	1
<input type="checkbox"/>	Q6	1
<input type="checkbox"/>	Q7	1

Choice Select the desired queue for weight configuration.

Queue Displays the ID number of priority Queue.

Weight Specify the queue weight for the desired queue.

3 Configuring Rate Limit

Choose the menu **QoS > Rate Limit** to load the following page.

Figure 3-1 Configuring Rate Limit

Rate Limit Config ?

Port	Ingress Rate (0-1000000)	Egress Rate (0-1000000)
<div style="border: 1px solid #ccc; padding: 2px; width: fit-content;"> Port 1 Port 2 Port 3 Port 4 Port 5 </div>	<input style="width: 80%;" type="text" value="0"/> Kbps	<input style="width: 80%;" type="text" value="0"/> Kbps

Apply

Port	Ingress Rate	Egress Rate
Port 1	Disabled	Disabled
Port 2	Disabled	Disabled
Port 3	Disabled	Disabled
Port 4	Disabled	Disabled
Port 5	Disabled	Disabled

Follow these steps to configure rate limit:

- 1) Select the desired ports and configure the ingress rate and egress rate for the ports.

Ingress Rate (Kbps)

Configure the bandwidth for receiving packets on the port. If the rate for receiving packets on the port exceeds the ingress rate, the packets will be discarded.

Egress Rate (Kbps)

Configure the bandwidth for sending packets on the port. If the rate for sending packets on the port exceeds the egress rate, the packets will be discarded.

- 2) Click **Apply**.

 **Note:**

- For a port, the ingress rate control feature and the storm control feature cannot be enabled at the same time. If you enable ingress rate control for a port, storm control will be disabled for that port automatically.
- When egress rate is set for one or more ports, it is recommended to disable the flow control on each port to ensure the switch works normally.
- For ports in the same LAG, rate limit should be configured the same to ensure a successful port aggregation.

4 Configuring Storm Control

Choose the menu **QoS > Storm Control** to load the following page.

Figure 4-1 Configuring Storm Control

Storm Suppression ?

Port	Unknown Unicast Packets		Multicast Packets		Broadcast Packets	
	State	Speed <input type="text" value="Kbps"/>	State	Speed <input type="text" value="Kbps"/>	State	Speed <input type="text" value="Kbps"/>
<div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Port 1</div> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Port 2</div> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Port 3</div> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Port 4</div> <div style="border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;">Port 5</div>	Disab <input type="text"/>	<input type="text"/>	Disab <input type="text"/>	<input type="text"/>	Disab <input type="text"/>	<input type="text"/>

Apply

Port	Unknown Unicast Packets		Multicast Packets		Broadcast Packets	
	State	Speed	State	Speed	State	Speed
Port 1	Disabled	0Kbps	Disabled	0Kbps	Disabled	0Kbps
Port 2	Disabled	0Kbps	Disabled	0Kbps	Disabled	0Kbps
Port 3	Disabled	0Kbps	Disabled	0Kbps	Disabled	0Kbps
Port 4	Disabled	0Kbps	Disabled	0Kbps	Disabled	0Kbps
Port 5	Disabled	0Kbps	Disabled	0Kbps	Disabled	0Kbps

Follow these steps to configure storm control:

- 1) Select the desired ports and configure the upper rate limit for forwarding Unknown unicast packets, multicast packets and broadcast packets

State	Enable or disable storm control on the port.
Speed	Specify the speed for the broadcast threshold, multicast threshold and unknown unicast frames threshold on the desired port. kbps: The switch will limit the maximum speed of the specific kinds of traffic in kilo-bits per second. pps: The switch will limit the maximum speed of the specific kinds of traffic in packets per second.
Unknown Unicast Packets	Specify the upper rate limit for receiving unknown unicast frames. The traffic exceeding the limit will be processed according to the Action configurations.
Multicast Packets	Specify the upper rate limit for receiving multicast packets. The multicast traffic exceeding the limit will be processed according to the Action configurations.
Broadcast Packets	Specify the upper rate limit for receiving broadcast packets. The broadcast traffic exceeding the limit will be processed according to the Action configurations.

- 2) Click **Apply**.

 **Note:**


- For a port, the storm control feature and the ingress rate control feature cannot be enabled at the same time. If you enable storm control for a port, ingress rate control will be disabled for that port automatically.
 - For ports in the same LAG, storm control should be configured the same to ensure a successful port aggregation.
-

5 Configuration Example for Basic QoS

5.1 Network Requirements

As shown below, both RD department and Marketing department can access the internet. When congestion occurs, the traffic from two departments can both be forwarded and the traffic from the Marketing department should take precedence.

Figure 5-1 Basic QoS Application Topology

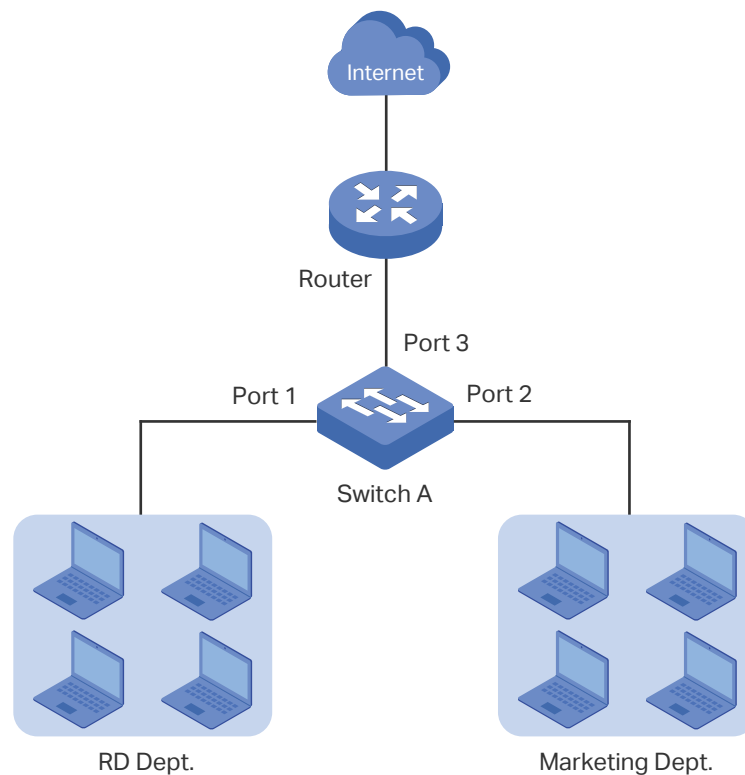

5.2 Configuration Scheme

To implement this requirement, you can configure QoS in port-based mode to put the packets from the Marketing department into the queue with the higher weight than the packets from the RD department. Follow these procedures to configure QoS in port-based mode.

- 1) Enable port-based mode.
- 2) Map port 1 and port 2 to different weight.

Demonstrated with a specific model, the following section provides configuration steps.

5.3 Configuration Steps

- 1) Choose the menu **QoS > QoS Basic** to load the following page. In the **Global Configuration** section, select QoS mode as **Port-based**. Click **Apply**.

Figure 5-2 Configuring Basic QoS in Port-Based Mode

The screenshot shows the 'Global Configuration' section with three radio button options for 'QoS mode': 'Port-Based' (selected), 'Based on 802.1p', and 'Based on DSCP'. An 'Apply' button is located at the bottom right.

- 1) In the **Based on Port Settings** section, specify the Priority for Port 1 as 1 and the Priority for Port 2 as 2. Click **Apply**.

Figure 5-3 Configuring Based on Port Settings

The screenshot shows a table titled 'Based on Port Settings' with columns for 'Choice', 'Port', and 'Priority'. The 'Priority' column contains a dropdown menu for each row. The values are: Port 1 (1), Port 2 (2), Port 3 (0), Port 4 (0), and Port 5 (0). An 'Apply' button is at the bottom right.

Choice	Port	Priority
<input type="checkbox"/>		0
<input type="checkbox"/>	Port 1	1
<input type="checkbox"/>	Port 2	2
<input type="checkbox"/>	Port 3	0
<input type="checkbox"/>	Port 4	0
<input type="checkbox"/>	Port 5	0

- 2) In the **Priority Queue Mapping** table, specify the Queue for Priority 1 as Q0 and the Queue for Priority 2 as Q2. Click **Apply**.

Figure 5-4 Configuring Priority Queue Mapping

The screenshot shows a table titled 'Priority Queue Mapping' with columns for 'Choice', 'Priority', and 'Queue'. The 'Queue' column contains a dropdown menu for each row. The values are: Priority 0 (Q1), Priority 1 (Q0), Priority 2 (Q2), Priority 3 (Q3), Priority 4 (Q4), Priority 5 (Q5), Priority 6 (Q6), and Priority 7 (Q7). An 'Apply' button is at the bottom right.

Choice	Priority	Queue
<input type="checkbox"/>		Q0
<input type="checkbox"/>	0	Q1
<input type="checkbox"/>	1	Q0
<input type="checkbox"/>	2	Q2
<input type="checkbox"/>	3	Q3
<input type="checkbox"/>	4	Q4
<input type="checkbox"/>	5	Q5
<input type="checkbox"/>	6	Q6
<input type="checkbox"/>	7	Q7

- 3) In the **Queue Weight Setting** table, specify the Weight for Queue Q0 as 1 and the Weight for Queue Q2 as 2. Click **Apply**.

Figure 5-5 Configuring Queue Weight Setting

Queue Weight Setting

Choice	Queue	Weight
<input type="checkbox"/>		<input type="text"/>
<input type="checkbox"/>	Q0	1
<input type="checkbox"/>	Q1	1
<input type="checkbox"/>	Q2	2
<input type="checkbox"/>	Q3	1
<input type="checkbox"/>	Q4	1
<input type="checkbox"/>	Q5	1
<input type="checkbox"/>	Q6	1
<input type="checkbox"/>	Q7	1

[Apply](#)

6 Appendix: Default Parameters

Default settings of QoS Basic configuration are listed in the following table.

Table 6-1 Default Settings of QoS Basic Configuration

Parameter	Default Setting
QoS Mode	Port-Based

Default settings of Rate Limit configuration are listed in the following table.

Table 6-2 Default Settings of Rate Limit Configuration

Parameter	Default Setting
Ingress Rate (Kbps)	Unlimited
Egress Rate (Kbps)	Unlimited

Default settings of Storm Control configuration are listed in the following table.

Table 6-3 Default Settings of Storm Control Configuration

Parameter	Default Setting
Status	Disable
Speed	Unlimited

Part 6

Monitoring

CHAPTERS

1. Monitoring
2. Viewing Traffic Summary
3. Configuring Mirroring
4. Testing Cables
5. Configuring Loop Prevention
6. Appendix: Default Parameters

1 Monitoring

1.1 Overview

With the monitoring feature, you can monitor the traffic on the switch.

1.2 Supported Features

Traffic Summary

Traffic Summary displays the traffic information of each port, which facilitates you to monitor the traffic and analyze the network abnormality.

Mirroring

Mirroring refers to the process of forwarding copies of packets from one port to a mirroring port. Usually, the mirroring port is connected to a data diagnose device, which is used to analyze the mirrored packets for monitoring and troubleshooting the network.

Cable Test

Cable Test functions to test the cable connection status, length and error length when the cable is connected to the port of the switch, which facilitates you to locate and diagnose the trouble spot of the network.

Loop Detection

Loop Detection is used to detect the loop created by a specific port.

2 Viewing Traffic Summary

Choose the menu **Monitoring > Traffic Summary** to load the following page.

Figure 2-1 Viewing Traffic Summary

Traffic Summary

Auto Refresh: Enable Disable

Apply

Refresh Clear

Port	Tx bytes	Rx bytes	Tx pkts	Rx pkts
Port 1	0	0	0	0
Port 2	0	0	0	0
Port 3	0	0	0	0
Port 4	0	0	0	0
Port 5	14128903	2852755	25503	19309

You can choose to enable or disable Auto Refresh and click **Apply**.

Auto Refresh	With this option enabled, the switch will automatically refresh the traffic summary every 10 seconds.
---------------------	---

You can view the statistics of each port. You can click **Refresh** to refresh the data and click **Clear** to clear the data.

Port	Displays the port number of the switch.
Tx bytes	Displays the number of octets transmitted on the port. Error packets are counted.
Rx bytes	Displays the number of octets received on the port. Error packets are counted.
Tx pkts	Displays the number of packets transmitted on the port.
Rx pkts	Displays the number of packets received on the port.

Note:

- Because of the supporting feature of jumbo frame, the frames with more than 15360 bytes can not be forwarded.

3 Configuring Mirroring

Choose the menu **Monitoring > Mirroring** to load the following page.

Figure 3-1 Configuring Mirroring

Port Mirroring Session List ?

Session	Status	Mirroring Port
1	Disable ▾	▾
2	Disable ▾	▾

Session	Mirrored Port	Ingress	Egress
▾	<div style="border: 1px solid #ccc; padding: 2px;"> Port 1 Port 2 Port 3 Port 4 </div>	Disable ▾	Disable ▾

Apply

Mirrored Port	Ingress	Egress
Port1	Disabled	Disabled
Port2	Disabled	Disabled
Port3	Disabled	Disabled
Port4	Disabled	Disabled
Port5	Disabled	Disabled

Follow these steps to configure mirroring:

- 1) Enable the port mirror feature globally. Specify a mirroring port. Click **Apply**.

Session Displays the session number.

Status Select to enable/disable the port mirror feature.

Mirroring Port Select a port from the drop-down list as the mirroring port.

- 2) Select one or more mirrored ports, enable or disable the ingress packets and egress packets to be mirrored for the ports. Click **Apply**.

Mirrored Port Select one or multiple desired port(s) as the mirrored port(s).

Ingress Select to enable/disable the Ingress feature. When the Ingress is enabled, the incoming packets received by the mirrored port will be copied to the mirroring port.

Egress Select to enable/disable the Egress feature. When the Egress is enabled, the outgoing packets sent by the mirrored port will be copied to the mirroring port.

3) In the table below, you can verify the configuration result for port mirroring.

 **Note:**

The LAG member ports cannot be set as a mirroring port but a mirrored port.

4 Testing Cables

Choose the menu **Monitoring > Cable Test** to load the following page.

Figure 4-1 Cable Test

Cable Test ?

Port Index 1 Test

Pair	Cable Status	Cable Length (m)
A	-	-
B	-	-
C	-	-
D	-	-

Notes:
Only support cable diagnostic for 1G speed.

Follow these steps to diagnose the cable:

- 1) Select a desired port for test. Click **Test** to test cables connected to the selected port.

Port Index Select the port for cable testing.

- 2) Check the test results in the table.

Pair Displays the cable pairs.

Cable Status Displays the cable test results.

Cable Length If the connection status is Normal, here displays the length of the cable. If the connection status is Close (or Short), Open or Crosstalk, here displays the length from the port to the trouble spot.

 **Note:**

Cable diagnostic is only supported for 1G speed.

5 Configuring Loop Prevention

Choose the menu **Monitoring > Loop Detection** to load the following page.

Figure 5-1 Configuring Loop Prevention

Loop Detection ?

Loop Prevention State: Disable ▾

Apply

Port	State
Port1	normal
Port2	normal
Port3	normal
Port4	normal
Port5	normal

Notes:
When a port detects loopback, the port will be automatically blocked.

Follow these steps to configure loop prevention:

- 1) Enable or disable loop prevention. Click **Apply**.

Loop prevention state Enable or disable the loop prevention feature.

- 2) In the table below, you can check the state of each port.

Port Displays the physical port number of the switch.

State Displays the port status.

 **Note:**

When a port detects loopback, the port will be automatically blocked.

6 Appendix: Default Parameters

Default settings of Traffic Summary are listed in the following table.

Table 6-1 Default Settings of Port Mirror Configuration

Parameter	Default Setting
Auto Refresh	Disable

Default settings of Mirroring are listed in the following table.

Table 6-2 Default Settings of Port Mirror Configuration

Parameter	Default Setting
Mirroring Status	Disable
Ingress	Disable
Egress	Disable

Default settings of Cable Test are listed in the following table.

Table 6-3 Default Settings of Port Mirror Configuration

Parameter	Default Setting
Port Index	1

Default settings of Loop Prevention are listed in the following table.

Table 6-4 Default Settings of Loop Preventikon Configuration

Parameter	Default Setting
Loop prevention state	Disable

Part 7

System Tools

CHAPTERS

1. System Tools
2. Upgrading the Firmware
3. Backing up and Restoring the Switch
4. Resetting the Switch
5. Rebooting the Switch

1 System Tools

1.1 Overview

In System Tools module, you can upgrade the firmware, back up and restore configuration, reset and reboot the switch.

1.2 Supported Features

System Upgrade

The switch system can be upgraded to get more functions and better performance.

Backup Restore

The switch configuration can be backed up and saved as a file to your computer, and restored later.

System Reset

The switch can be reset to factory settings.


System Reboot

The switch can be manually rebooted.

2 Upgrading the Firmware

Choose the menu **System Tools > System Upgrade** to load the following page.


Figure 2-1 Being Ready to Upgrade the Firmware

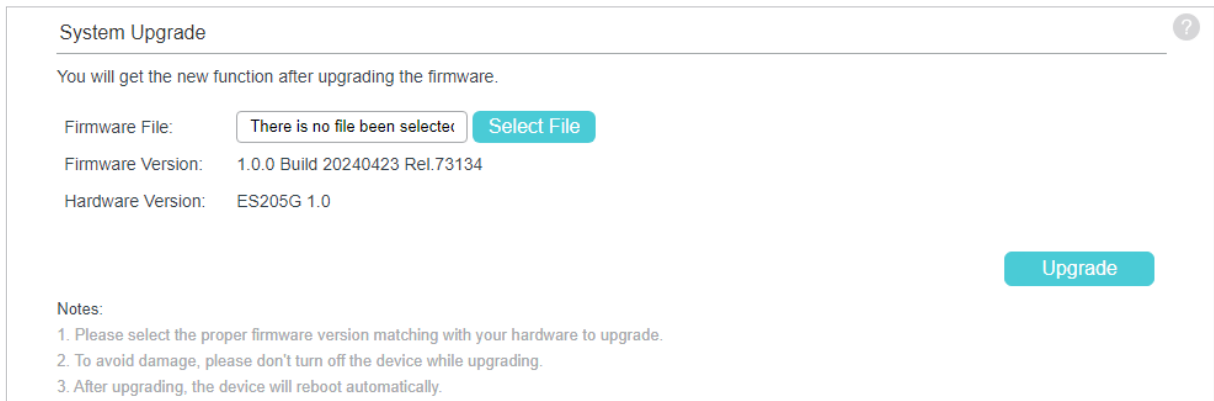

Follow these steps to upgrade the firmware:


- 1) Click **Select File** to load the following page. Specify the firmware file path and select the firmware to upgrade.

Figure 2-2 Browsing the Firmware File

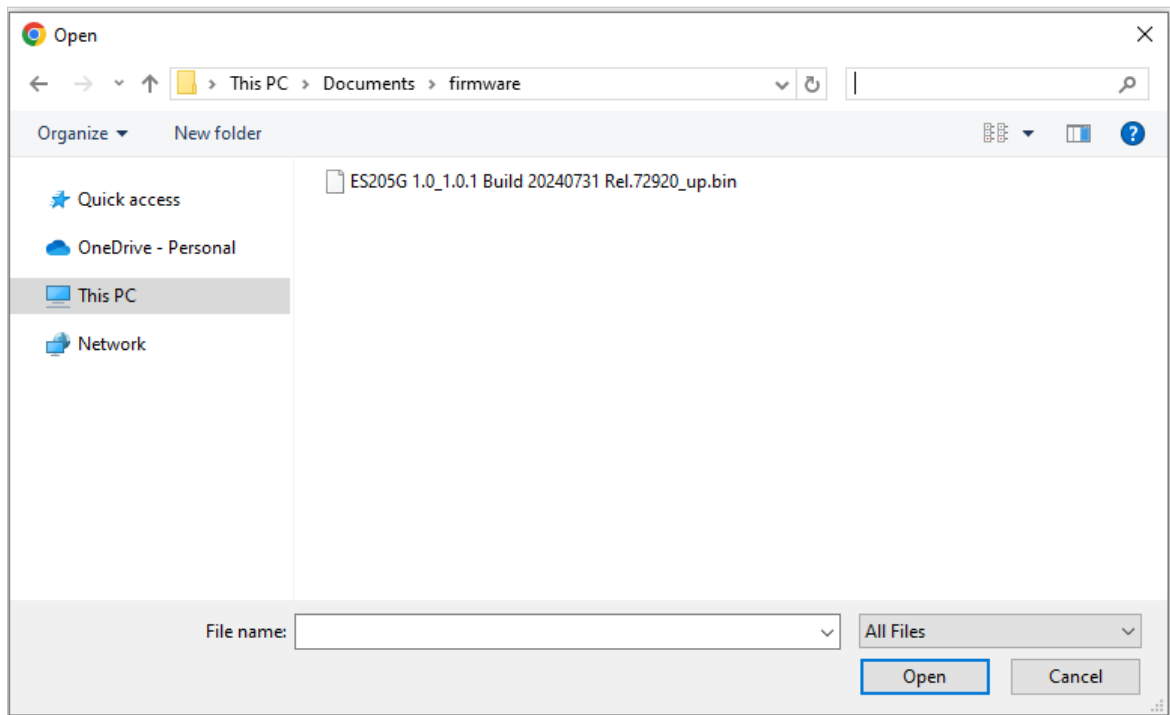

2) Click **Open** and the following page will be displayed. Click **Upgrade**.

Figure 2-3 Upgrading the Firmware

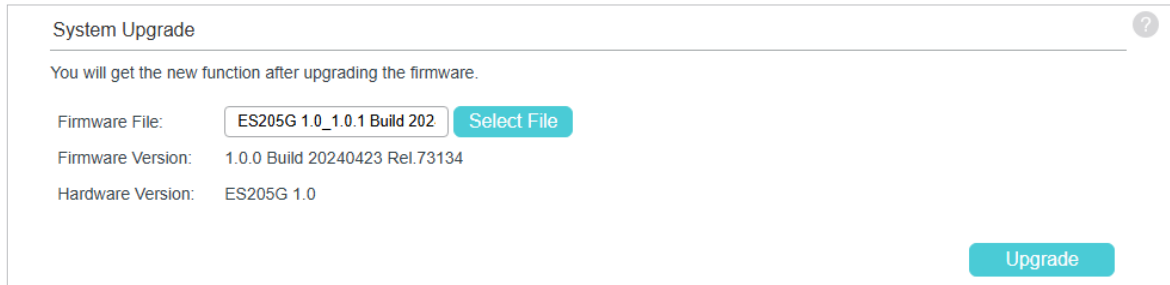

System Upgrade ?

You will get the new function after upgrading the firmware.

Firmware File: [Select File](#)

Firmware Version: 1.0.0 Build 20240423 Rel.73134

Hardware Version: ES205G 1.0

[Upgrade](#)

 **Note:**

- It will take several minutes to upgrade the firmware. Wait without any operation.
- Select the proper software version matching with the hardware to upgrade.
- To avoid damage, do not power down the switch while upgrading the firmware.
- It is recommended to backup the configuration before upgrading.

3 Backing up and Restoring the Switch


With backup and restore, you can:

- Save the current configuration.
- Restore to the previous configuration.

3.1 Saving the Current Configuration

Choose the menu **System Tools > Backup Restore** to load the following page. In the **System Configuration Backup** section, click **Configuration Backup** to save the configuration file to your PC.

Figure 3-1 Backing Up the Configuration

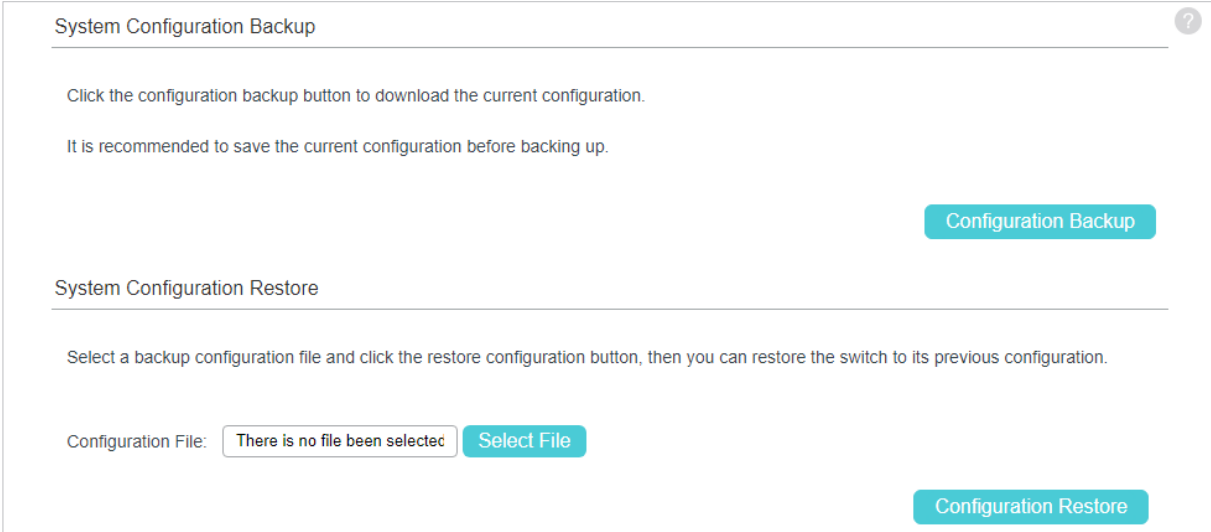

The screenshot shows a web interface with two main sections. The top section is titled "System Configuration Backup" and contains the text: "Click the configuration backup button to download the current configuration. It is recommended to save the current configuration before backing up." Below this text is a teal button labeled "Configuration Backup". The bottom section is titled "System Configuration Restore" and contains the text: "Select a backup configuration file and click the restore configuration button, then you can restore the switch to its previous configuration." Below this text is a "Configuration File:" label, a text input field containing "There is no file been selected", a teal "Select File" button, and a teal "Configuration Restore" button. A help icon (?) is visible in the top right corner of the backup section.


 **Note:**

It will take several minutes to save the configuration file. Wait without any operation.

3.2 Restoring to the Previous Configuration

Choose the menu **System Tools > Backup Restore** to load the following page.


Figure 3-2 Restoring the Configuration

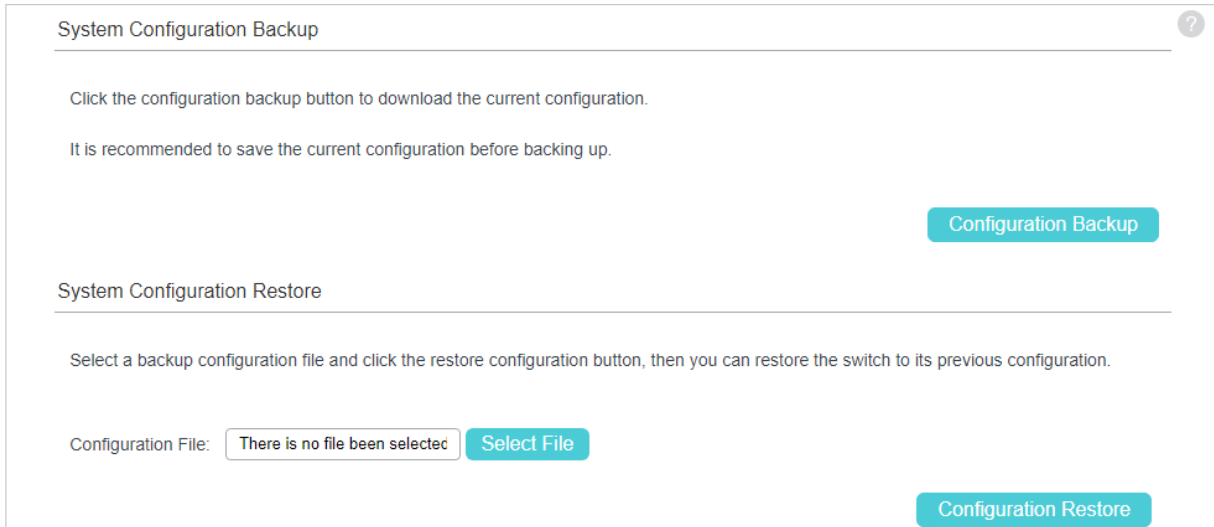

Follow these steps to restore the switch to the previous configuration:


- 1) In the **System Configuration Restore** section, click **Select File** to load the following page. Specify the configuration file path and select the configuration file.

Figure 3-3 Choosing the Configuration File

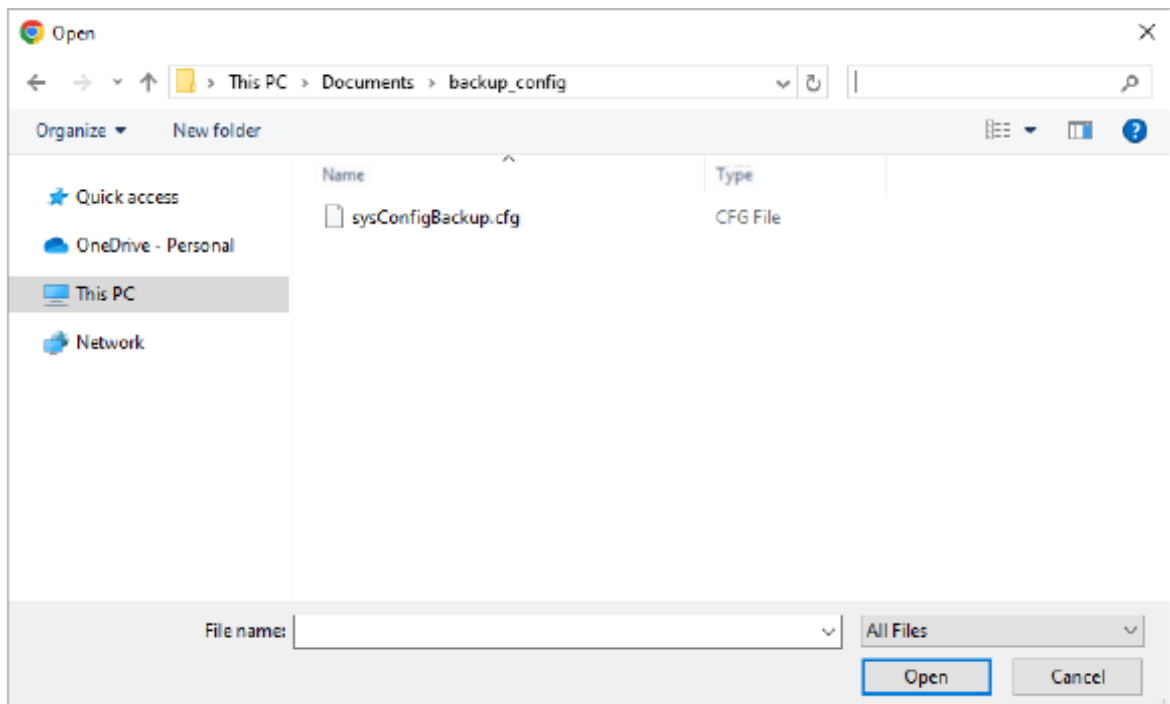

- 2) Click **Open** and the following page will be displayed. In the **System Configuration Restore** section, click **Configuration Restore** to restore the switch to the previous configuration. It will take effect after the switch automatically reboots.

Figure 3-4 Restoring to the Previous Configuration

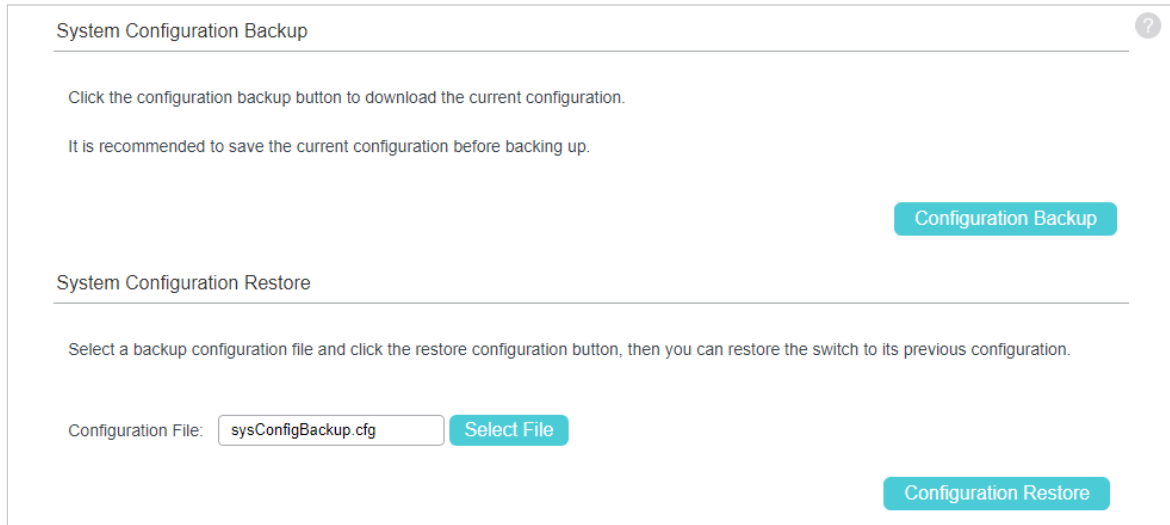

The screenshot shows a web interface with two main sections. The top section is titled "System Configuration Backup" and contains the text: "Click the configuration backup button to download the current configuration. It is recommended to save the current configuration before backing up." Below this text is a teal button labeled "Configuration Backup". The bottom section is titled "System Configuration Restore" and contains the text: "Select a backup configuration file and click the restore configuration button, then you can restore the switch to its previous configuration." Below this text is a text input field labeled "Configuration File:" containing the text "sysConfigBackup.cfg", followed by a teal button labeled "Select File". At the bottom right of the section is a teal button labeled "Configuration Restore".


Note:

- It will take several minutes to restore the configuration. Wait without any operation.
- To avoid any damage, do not power down the switch while being restored.
- After being restored, the current configuration of the switch will be lost.

4 Resetting the Switch

Choose the menu **System Tools > System Reset** to load the following page.


Figure 4-1 Resetting the Switch

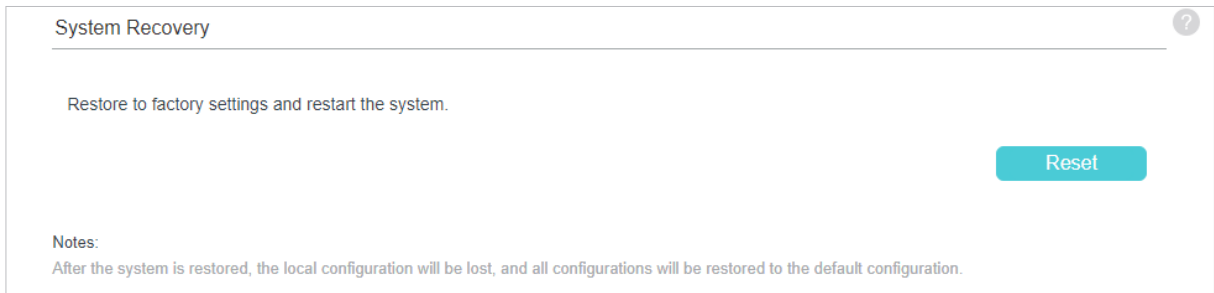

Follow these steps to reset the switch.

- 1) Click **Reset**, and the following page will pop up.

Figure 4-2 Confirming Reset Operation

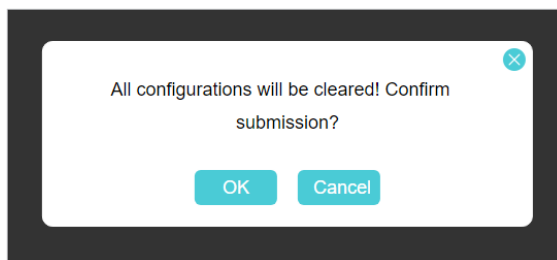

- 2) Click **OK** to reset the switch.


Note:

- After the switch is reset, it will reboot automatically.
 - It will take several minutes to reboot the switch. Wait without any operation while the switch reboots.
 - To avoid any damage, do not power down the switch during the reset.
 - After the switch is reset, all the settings will be restored to the default.
-

5 Rebooting the Switch

Choose the menu **System Tools > System Reboot** to load the following page. Click **Reboot**.

Figure 5-1 Rebooting the Switch

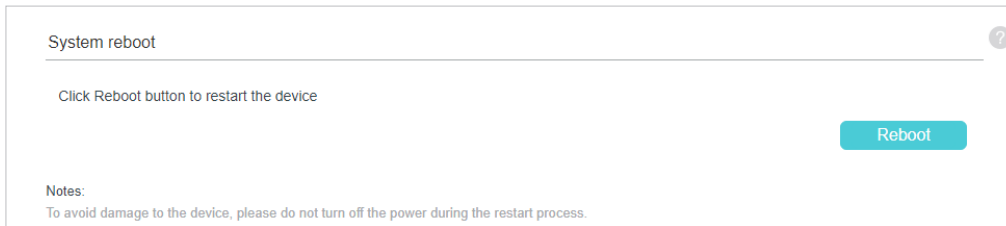

Note:

- It will take several minutes to reboot the switch. Wait without any operation while the switch reboots.
 - To avoid any damage, do not power down the switch while the switch reboots.
-

Part 8

Controller Settings

CHAPTERS

1. Controller Settings
2. Configuring Controller Settings
3. Appendix: Default Parameters

1 Controller Settings

1.1 Overview

With the controller settings, you can enable the switch to be discovered and then be managed centrally by the Omada Controller.

1.2 Supported Features

Cloud-Based Controller Management

By enabling Cloud-Based Controller Management, you can configure your switch via the Omada Cloud-Based Controller and enjoy centralized management.

Controller Inform URL

By entering the Inform URL/IP Address of the controller, you can allow the switch to be discovered by the controller via this address.

2 Configuring Controller Settings

Choose the menu **Controller Settings > Controller Settings** to load the following page.

Figure 2-1 Configuring Controller Settings

Cloud-Based Controller Management
?

Connection Status: Disabled

Cloud-Based Controller Management: Enable Disable

Notes:
 To enjoy centralized management on Omada Cloud-Based Controller, enable Cloud-Based Controller Management and add the device to the controller via its serial number.
 You can disable this feature if you do not need to manage the device with the Omada Cloud-Based Controller.

Controller Inform URL

Inform URL/IP Address:

Notes:
 Enter the inform URL or IP address of your controller to tell the device where to discover the controller.
 This feature is commonly used for the device to be managed by the controller in Layer 3 deployments.

Follow these steps to configure controller settings:

- 1) Select Cloud-Based Controller Management as **Enable**. Click **Apply**.

Connection Status

Displays the status of the connection between the switch and the Omada Cloud-Based Controller.

Disabled: Cloud-Based Controller Management is disabled.

Online: The switch is connected to the Omada Cloud and not managed by the Cloud-Based Controller yet.

Offline: The switch is not connected to the Omada Cloud.

Cloud-Based Controller Management

Enable or disable Omada Cloud-Based Controller Management. With this feature enabled, the switch can communicate with the Omada Cloud Platform.

- 2) Specify the inform URL or IP address of the controller. Click **Apply**.

Inform URL/IP Address

Enter the inform URL or IP address of your controller to tell the switch where to discover the controller.

 **Note:**

- To enjoy centralized management on the Omada Cloud-Based Controller, enable Cloud-Based Controller Management and add the switch to the controller via its serial number. You can disable Cloud-Based Controller Management if you do not need to manage the device with the Omada Cloud-Based Controller.
 - To get the inform URL of the Omada Cloud-Based Controller, click the controller on your Omada Cloud Dashboard to reveal the Properties window, and then go to the Details tab.
 - Controller Inform URL is commonly used for the device to be managed by the controller in the Layer 3 deployment.
-

3 Appendix: Default Parameters

Default settings of Controller Settings are listed in the following table.

Table 3-1 Default Settings of Controller Settings

Parameter	Default Setting
Cloud-Based Controller Management	Disable
Inform URL/IP Address	Null

Part 9

Configuring PoE

(Only for Certain Devices)

CHAPTERS

1. PoE
2. Configuring PoE
3. Configuring PoE Auto Recovery
4. Configuring Extend Mode
5. Appendix: Default Parameters

1 PoE

1.1 Overview

PoE (Power over Ethernet) is an implementation of power supply of PD (Powered Device) linked to the PoE switch through the RJ-45 port. It is a mechanism which implements power supply and data transmission synchronously.

In PoE module, you can configure basic settings, PoE auto recovery, and extend mode for the PoE ports of the switch.

 **Note:**

- The PoE Config is only available on Easy Managed Switches with PoE ports. For other non-PoE Easy Managed Switches, this feature is not supported.
-

1.2 Supported Features

PoE

You can configure the general PoE settings for the switch as well as the PoE parameters for each port.

PoE Auto Recovery

PoE Auto Recovery uses ping packets to detect the link status between PoE ports and connected PoE powered devices (PDs). The switch pings the IP addresses of PDs constantly. If a PD loses connection, the switch will reboot it automatically.

Extend Mode

Extend Mode can increase the transmission distance to support long-distance wiring. When enabled, it extends the maximum transmission distance from 100 m to 250 m but limits the maximum speed to 10 Mbps.

2 Configuring PoE

Choose the menu **PoE > PoE config** to load the following page.

Figure 2-1 Configuring PoE

Global Config

System Power Limit	System Power Consumption	System Power Remain
<input type="text" value="65"/> w(1-65)	<input type="text" value="0"/> w	<input type="text" value="65"/> w

[Apply](#)

Port Config

Select	Port	PoE Status	PoE Priority	Power Limit (0.1w-30.0w)	Power(w)	Current(mA)	Voltage(v)	PD Class	Power Status
<input type="checkbox"/>		<input type="text" value=""/>	<input type="text" value=""/>	<input type="text" value=""/>					
<input type="checkbox"/>	Port 1	Enabled	Low	Class 4	---	---	---	---	OFF
<input type="checkbox"/>	Port 2	Enabled	Low	Class 4	---	---	---	---	OFF
<input type="checkbox"/>	Port 3	Enabled	Low	Class 4	---	---	---	---	OFF
<input type="checkbox"/>	Port 4	Enabled	Low	Class 4	---	---	---	---	OFF

[Apply](#)

Follow these steps to configure PoE:

- 1) In the **Global Config** section, you can view the current PoE parameters. You can configure the System Power Limit. Click **Apply**.

System Power Limit	Configure the maximum power the PoE switch can supply.
System Power Consumption	Displays the real-time system power consumption of the PoE switch.
System Power Remain	Displays the real-time system remaining power of the PoE switch.

- 2) In the **Port Config** section, select the ports you want to configure and specify the parameters. Click **Apply**.

PoE Status	Enable or disable the PoE function on corresponding ports. A port can supply power to the PD when its status is enable.
PoE Priority	Select the priority level (High, Middle, Low) for the corresponding port. When the supply power exceeds the system power limit, the switch will power off PDs on low-priority ports to ensure stable running of other PDs.
Power Limit (0.1 w-30 w)	Specify the maximum power the corresponding port can supply. The following options are provided: Class 1: The maximum power that the port can supply is 4 W. Class 2: The maximum power that the port can supply is 7 W. Class 3: The maximum power that the port can supply is 15.4 W. Class 4: The maximum power that the port can supply is 30 W. Manual: You can enter a value manually.
Power (w)	Displays the real-time power supply of the port.
Current (mA)	Displays the real-time current of the port.
Voltage (v)	Displays the real-time voltage of the port.
PD Class	Displays the class which the linked PD belongs to.
Power Status	Displays the real-time power status of the port.

3 Configuring PoE Auto Recovery

Choose the menu **PoE > PoE Auto Recovery** to load the following page.

Figure 3-1 Configuring PoE Auto Recovery

Global Config

PoE Auto Recovery: Enable Disable

Apply

Notes:
 When PoE Auto Recovery enabled, some problems may occur in case of specified usage sceneries or improper configurations.
 1. Before upgrading the connected PoE powered device (PD), disable PoE Auto Recovery on the corresponding port to avoid PD's damage.
 2. Ping IP Address should match the connected PD's IP address. Otherwise, the switch will continually reboot the PD.
 3. It is recommended to configure the switch and its connected PDs to the same subnet, and when 802.1Q VLAN enabled, the connected PD should be in the port's default VLAN (whose ID is the PVID).

Port Config Auto Refresh

Select	Port	Ping IP Address	Startup Delay (Seconds)	Interval (Seconds)	Failure Threshold	Break Time (Seconds)	Failures	Reboots	Total Pings	Status
<input type="checkbox"/>		<input type="text"/>	<input type="text"/> (30-600)	<input type="text"/> (10-120)	<input type="text"/> (1-10)	<input type="text"/> (3-120)				<input type="text"/>
<input type="checkbox"/>	Port 1		60	60	5	15	0	0	0	Disabled
<input type="checkbox"/>	Port 2		60	60	5	15	0	0	0	Disabled
<input type="checkbox"/>	Port 3		60	60	5	15	0	0	0	Disabled
<input type="checkbox"/>	Port 4		60	60	5	15	0	0	0	Disabled

Apply Refresh

Follow these steps to enable PoE Auto Recovery and configure the parameters:

1) In the **Global Config** section, enable or disable PoE Auto Recovery. Click **Apply**.

[PoE Auto Recovery](#) Enable or disable PoE Auto Recovery globally.

Note:

When PoE Auto Recovery enabled, some problems may occur in case of specific application scenarios or improper configurations.

- Before upgrading the connected PoE powered device (PD), disable PoE Auto Recovery on the corresponding port to avoid PD's damage.
- It is recommended to configure the switch and its connected PDs to the same subnet, and when 802.1Q VLAN enabled, the connected PD should be in the port's default VLAN (whose ID is the PVID). For detailed configurations, refer to [Configuring 802.1Q VLAN](#).

2) In the **Port Config** section, select the desired ports and specify the parameters. Click **Apply**.

Auto Refresh	When Auto Refresh is enabled, the switch refreshes the data every 5 seconds so you can get the real-time ping statistics.
Ping IP Address	Enter the IP address of the PD connected to the port. Ping IP Address should be the same as the connected PD's IP address. Otherwise, the switch will continually reboot the PD.
Startup Delay	Specify how long the switch waits for the connected PD's rebooting before the switch starts to ping the PD's IP address. It ranges from 30 to 600 seconds.
Interval	Specify the interval between two consecutive ping packets. It ranges from 10 to 120 seconds.
Failure Threshold	Specify the threshold for ping failures. If the switch fails to get the ping response from the PD on the port, the switch will retry until the number of ping failures reaches the threshold, and then the switch will reboot the PD. It ranges from 1 to 10.
Break Time	Specify how soon the switch reboots the PD after the number of ping failures reaches the threshold. It ranges from 3 to 120 seconds.
Failures	Display the number of ping failures since the latest reboot of the PD. It will be reset when the PD responds to the ping packet or is rebooted.
Reboots	Display the number of PD's reboots. It will be reset after reaching 9,999 or when the switch is rebooted.
Total Pings	Display the total number of ping packets that the switch sends to the connected PD. It will be reset after reaching 9,999 or when the switch is rebooted.
Status	Enable or disable PoE Auto Recovery on the desired ports. To make it enabled, enable PoE Auto Recovery both globally and on the port.

4 Configuring Extend Mode

Choose the menu **PoE > Extend Mode** to load the following page.

Figure 4-1 Configuring Extend Mode

Extend Mode Config

Select	Port	Extend Mode
<input type="checkbox"/>		<div style="border: 1px solid #ccc; padding: 2px; display: inline-block;"> ▼ </div>
<input type="checkbox"/>	Port 1	Disabled
<input type="checkbox"/>	Port 2	Disabled
<input type="checkbox"/>	Port 3	Disabled
<input type="checkbox"/>	Port 4	Disabled

Apply

Notes:
Enabling Extend Mode on the port extends the maximum transmission distance from 100 m to 250 m and limits the maximum speed to 10 Mbps.

Follow these steps to enable Extend Mode and configure the parameters:

- 1) In the **Extend Mode Config** section, select the desired ports and choose from the drop-down list to enable or disable **Extend Mode** .

Extend Mode Select to enable/disable Extend Mode on the desired port.

- 2) Click **Apply**.

5 Appendix: Default Parameters

Default settings of PoE are listed in the following table.

Table 5-1 Default Settings of PoE

Parameter	Default Setting
Global Config	
System Power Limit	65 W
Port Config	
PoE Status	Enabled
PoE Priority	Low
Power Limit	Class 4

Default settings of PoE Auto Recovery are listed in the following table.

Table 5-2 Default Settings of PoE Auto Recovery


Parameter	Default Setting
Global Config	
PoE Auto Recovery	Disabled
Port Config	
Ping IP Address	Null
Startup Delay	60 seconds
Interval	60 seconds
Failure Threshold	5
Break Time	15 seconds
Status	Disabled

Default settings of Extend Mode are listed in the following table.

Table 5-3 Default Settings of Extend Mode

Parameter	Default Setting
Extend Mode	Disabled

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2024 TP-Link Technologies Co., Ltd. All rights reserved.

<https://www.tp-link.com>